MaxPac 8000/8200 SL

User Setup and Maintenance Guide

Rugged Portable Computers, LLC
495 Production Avenue
Madison, AL 35758, USA

Warranties and Liabilities

Rugged Portable Computers (RPC) LLC warrants that the Product, in the course of its normal use, will conform to RPC's specifications and be free from defects in material and workmanship for a period of twelve (12) months from the date of the original sale. Such warranty commences on the purchase date appearing on the invoice. The original end user is entitled to customer support through telecommunication during normal business hours and email support to be responded to as support staff are available. Such support shall be limited to hardware operations and the software required operating such hardware. Upon written request, and subject to the availability of RPC personnel, additional support may be provided by RPC in its sole discretion on a time and materials basis.

Limited Warranty for Software. RPC warrants to the original end user only that the Software as delivered at the time of purchase will perform in RPC's hardware, and that the original diskettes or compact disks are free from defects in material and workmanship under normal use, for a period of thirty (30) days from the date of original sale, provided the Software is used with a RPC unit. RPC makes no warranty that the Software will work in combination with any hardware or software products provided by third parties, that the operation of the Software will be uninterrupted or error-free, or that all defects in the Software will be corrected. This limited warranty is void if failure of the Software has resulted from accident, abuse, or misapplication. RPC's entire liability, and your sole and exclusive remedy shall be, at RPC's option, either to (a) correct or help you work around or avoid a reproducible Error or (b) replace defective diskettes or compact disks. Any replacement Software will be warranted for the remainder of the original Limited Software Warranty Period.

Limited Warranty for the Product. RPC warrants to the original end user only that all Products sold by RPC will be free from defects in material and workmanship and conform substantially to the applicable standards set forth in the Documentation, under normal use, for a period of 365 days from the date of original sale. This limited warranty is void if failure of the Product has resulted from accident, abuse, or misapplication. If RPC confirms a Product is defective after you have obtained a Return Materials Allowance Number for such Product and, at your expense, have returned the Product to RPC for inspection, RPC will, at its election, repair or replace such Product at no charge to you.

The Replacement Product may be either new or remanufactured. In the event that the Product returned is not defective, you will be responsible for freight costs for return shipment to you. The foregoing warranty shall not apply to Product that has been (a) damaged by accident, Acts of God, shipment, improper installation, abnormal physical or electrical stress, misuse or misapplication, as determined by RPC in its sole reasonable discretion, or (b) modified without RPC's express written acceptance of such modification for warranty purposes. RPC reserves the right to charge additional fees for repairs or replacements performed outside the Warranty Period. Any replaced or repaired components, subassemblies or units as well as spare parts are warranted for thirty (30) days or the remainder of the original warranty period, whichever is longer. RPC shall not be responsible for any software, firmware, information or memory data of yours contained in, stored on, or integrated with any Products returned to RPC pursuant to any warranty under this Agreement.

Disclaimer of Warranties. EXCEPT AS SPECIFICALLY PROVIDED ABOVE, NEITHER RPC NOR ITS LICENSORS OR SUPPLIERS PROVIDES ANY WARRANTY OF ANY KIND FOR THE SOFTWARE OR THE PRODUCT, WHETHER EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. EXCEPT AS SET FORTH IN THIS AGREEMENT, THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE AND THE PRODUCT IS WITH YOU. If a disclaimer of implied warranties is not permitted by law, the duration of any such implied warranty is limited to ninety (90) days from the date of purchase by the original end user. Some jurisdictions do not allow the exclusion of implied warranties or limitations on how long an implied warranty may last, so such limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

Liability Exclusions and Limitations. IN NO EVENT SHALL RPC OR ITS LICENSORS OR SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING LOST PROFITS, LOSS OF USE OR INTERRUPTION OF BUSINESS), OR FOR LEGAL FEES, ARISING OUT OF THE USE OF THE SOFTWARE OR THE PRODUCT, REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR OTHERWISE, EVEN IF RPC OR ITS LICENSORS OR SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL COMPANY'S AGGREGATE LIABILITY HEREUNDER EXCEED THE PURCHASE PRICE PAID BY YOU. This limitation shall apply notwithstanding any failure or inability to provide the limited remedies set forth above. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.

Proprietary Rights-Contracts with Certain U.S. Government Agencies. If the Software is acquired under the terms of a Department of Defense or civilian agency contract, the Software is "commercial item" as that term is defined at 48 C.F.R. 2.101 (Oct. 1995), consisting of "commercial computer software" and "commercial computer software documentation" as such terms are used in 48 C.F.R. 12.212 of the Federal Acquisition Regulations and its successors and 48 C.F.R. 227.7202-1 through 227.7202-4 (June 1995) of the DoD FAR Supplement and its successors. All U.S. Government end users acquire the Software with only those rights set forth in this Agreement.

Export Restrictions. You acknowledge that the laws and regulations of the United States restrict the export and re-export of certain commodities and technical data of United States origin, including the Product and the Software, in any medium. You agree that you will not knowingly, without prior authorization if required, export or re-export the Software or the Product in any medium without the appropriate United States and foreign government licenses.

Severability. You acknowledge and agree that each provision of this Agreement that provides for a disclaimer of warranties or an exclusion or limitation of damages represents an express allocation of risk, and is part of the consideration of this Agreement. Invalidity of any provision of this Agreement shall not affect the validity of the remaining provisions of this Agreement.

General. This Agreement is the entire agreement between you and RPC relative to the Product and the Software, and supersedes all prior written statements, proposals or agreements relative to its subject matter. It may be modified only by a writing executed by an authorized representative of RPC. No RPC reseller or sales representative is authorized to make any modifications, extensions or additions to this Agreement. This Agreement is governed by the laws of the State of Alabama without application of the principles of conflicts or choice of laws. The application of the United Nations Convention on Contracts for the International Sale of Goods to this Agreement is expressly excluded.

Copyright

The materials in this document are the copyrighted works of Rugged Portable Computers (RPC) LLC, copyright © 2014. All rights reserved. Email **support@maxvision.com** for permission to duplicate and otherwise re-use.

Trademarks

MaxVision and MaxPac are registered trademarks, and Rugged Portable Computers (RPC), MaxCube, MaxPro, and TeraPac are trademarks, of Rugged Portable Computers LLC. Microsoft and Windows are registered trademarks of Microsoft Corporation. Intel and Pentium are registered trademarks and Xeon is a registered trademark of Intel Corporation. Other trademarks and registered trademarks are the property of their respective owners.

Regulatory Approvals

EN60950, EN55024, EN55022, FCC, Part 15, EN61000-3-2 & EN61000-3-3.

Warnings

Changes or modifications to this device that are not approved by the party responsible for compliance could void the user's authority to operate the equipment.

To reduce the risk of electrical shock, do not attempt to open the device unless instructed to do so. Do not use any tool for purposes other than instructed.

A Lithium Ion battery is included with the system motherboard. This battery is used for the Real Time Clock (RTC) circuit. The expected lifetime of the battery is approximately 5 years. There is a danger of explosion if this battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the motherboard manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Contents

Legal and Related Information
Warranties and Liabilities ii
Copyright iii
Trademarks iii
Regulatory Approvals iii
Warnings iii

Chapter 1: Quick Start Setup 1
Documentation Conventions 1
Icons 1
Fonts 1
Inspecting the Shipment 2
Unpacking the MaxPac 2
Tilting and Opening the Displays (vertical display option) 7
Tilting and Opening the Displays (horizontal option) 12
Removable Devices 15

Chapter 2: Module Replacement & Upgrade Procedures 19
Introduction 20
Required Tools and Techniques 20
Names and Types of Screws 20
Removing the Display Assembly 20
Accessing the Inside of the Chassis 24
Motherboard Quick Reference 25
Adding/Replacing Memory Sticks 29
Removing/Replacing PCIe Cards 30
Removing/Replacing the Power Supply 32

Appendix A: Creating and Using Backup Images (Including Restoring Your OS) 38
Introduction 38
Restoring the RPC-supplied Image 38
Creating Your Own Image 39
Restoring Your Own Image 42

Appendix B: Regular System Maintenance 47
Cleaning Interior Dust 47
Maintaining (Cleaning) the Dust Filter 47
Replacing the Lithium Battery 49

Appendix C: Screws and Required Tools 50
Screws 50
Required Tools 51

Appendix D: Contacting MaxVision Support (RMA and Serial Numbers) 52
Repairing/Replacing Products/Accessories 52
Contacting Technical Support and RMA Numbers 52

Chapter 1: Quick Start Setup

Documentation Conventions

Icons

- The information icon is used to annotate important information.

- The exclamation icon is used to annotate cautionary information.

Fonts

- *Italics* font is used for emphasis, book titles, commands, and path and file names.
- **Bold** may be used to emphasize text, highlight menu items, and denote the titles of dialog boxes.
- **Menu > Command** identifies the path used to select a menu command.
- `Courier` font is used for program listings and for any text messages that the software displays on the screen.
- **Note:** describes important information, warnings, or unique commands.
- “Select” means click the left mouse button on the indicated item.
- “Click-left” (or just “click”) means click the left mouse button on the indicated item.
- “Click-middle” means click the middle mouse button on the indicated item.
- “Click-right” means click the right mouse button on the indicated item.
- “Double-click” means click twice consecutively with the left mouse button.
- “Drag-left” (or just “drag”) means press and hold the left mouse button on the indicated item, then move the cursor (pointer) to the destination and release the button.
- “Shift-click-left” means press and hold the <Shift> key then click the left mouse button on the indicated item.
- “Ctrl-click-left” means press and hold the <Ctrl> key then click the left mouse button on the indicated item.

Inspecting the Shipment

MaxPac systems are packaged to withstand the roughest of treatment during shipping. Any boxes, foam core padding, and anti-static bags should be stored safely away in case you need to ship the system for any reason in the future. Inspect the containers the system arrived in. If there is any unusual damage to the containers, make note of the damage on the delivery form and contact Portable Rugged Portable Computers support.

Unpacking the MaxPac

1) MaxPac systems are always shipped in an associated Pelican-type transport case. Place the transport case containing the MaxPac system on the floor in close proximity to the desired setup location. Disengage the clasps and open lid as illustrated in Figure 1-1.

Figure 1-1

2) Lift the MaxPac system out of the transport case as illustrated in Figures 1-2 and 1-3. The displays should be up and the handles to the front.

Figure 1-2

Figure 1-3

3) Observe the storage compartment for the keyboard, mouse, and documentation package as illustrated in Figure 1-4.

Figure 1-4

4) Connect the keyboard, mouse, and AC power, as illustrated in Figures 1-5 and 1-6.

Figure 1-5

Figure 1-6

5) Familiarize yourself with the motherboard I/O port details as illustrated in Figure 1-7 (MaxPac 8000 SL). Note that two additional USB2, audio in and audio out ports are included above the motherboard I/O ports. MaxPac 8200 SL (Dual CPU) also shown in Figure 1-8.

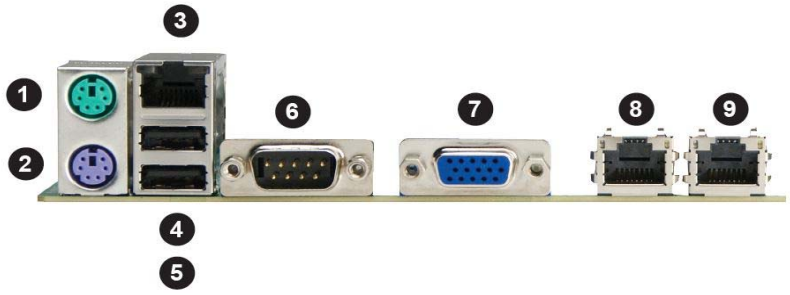

Motherboard I/O Back Panel		
1. PS/2 Mouse Port	4. USB Port 0 (2.0)	7. VGA Port
2. PS/2 Keyboard Port	5. USB Port 1 (2.0)	8. LAN1
3. IPMI LAN Port (X9SRL-F only)	6. COM1 Port	9. LAN2

Figure 1-7 Motherboard I/O Port locations and definition (8000 SL Single CPU)

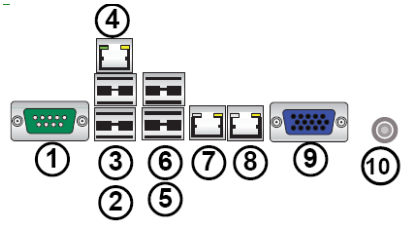

1.	COM Port 1 (Turquoise)
2.	Back Panel USB Port 6
3.	Back Panel USB Port 7
4.	IPMI_Dedicated LAN
5.	Back Panel USB Port 8
6.	Back Panel USB Port 9
7.	Gigabit LAN 1
8.	Gigabit LAN 2
9.	Back Panel VGA (Blue)
10.	UID Switch

Figure 1-8 Motherboard I/O Port locations and definition (8200 SL Dual CPU)

6) Observe the hard power switch (Figure 1-9) and soft power switch (Figure 1-10).

Figure 1-9

Figure 1-10

Tilting and Opening the Displays (vertical display option)

1) The black lever at the center of the display assembly is used to unlock the display and allow it to pull out into the tilted position as illustrated in Figures 1-11 and 1-12.

Figure 1-11

Figure 1-12

2) Observe the display assembly in its tilted position as illustrated in Figure 1-13.

Figure 1-13

3) Pull the lever at the right of the display assembly to unlock the upper display as illustrated in Figure 1-14.

Figure 1-14

4) Rotate the upper display into its deployed position as illustrated in Figures 1-15 and 1-16.

Figure 1-15

5) Observe the upper display in its deployed position.

Figure 1-16

6) The upper display should now be locked in its deployed position. Pull the lever from its stored area and use the thumbscrew to lock the display as illustrated in Figures 1-17 and 1-18.

Figure 1-17

Figure 1-18

7) On the side of each display you will observe a row of buttons; these can be used to adjust display settings or bring up that display's OSD (on-screen display) menu. By default, the OSDs use the DP input (even while connected to the Display Port or DVI outputs from the graphics card). If no OSD data is present, a quick solution is to power off the display and power it back on, at which time the display will then scan for an active signal.

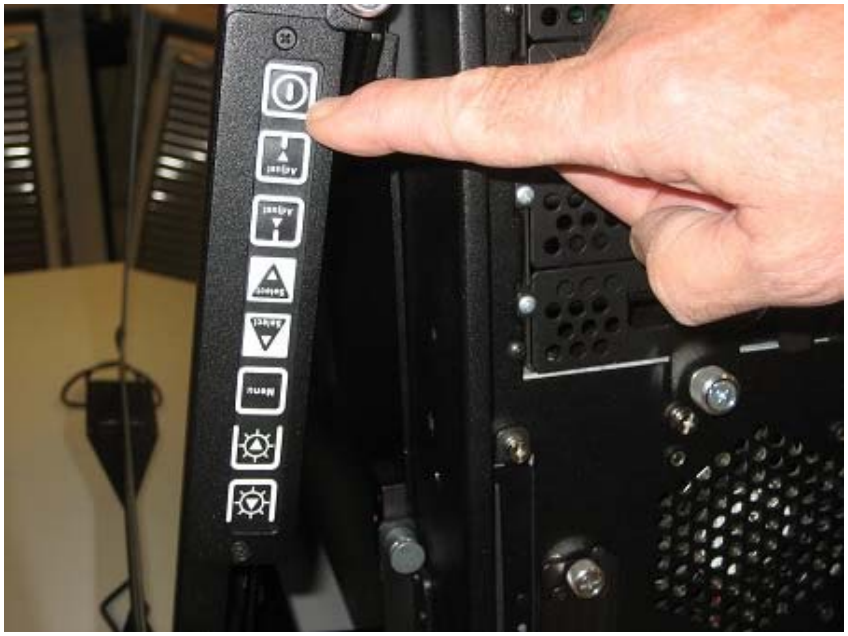

Figure 1-19

Observe the display controls shown above. In particular, note the power button located to the top of the membrane switch array -- this is an independent power button for the display.

Pressing the **MENU/SEL** button (the third button from the bottom) will bring up a series of items on the screen. Use the **+/–** buttons to move between these items; press and release the **MENU/SEL** button to select that item; use the **+/–** buttons to vary the settings; and then press and release the **MENU/SEL** button to accept the new settings.

Tilting and Opening the Displays (horizontal option)

1) The black lever at the center of the display assembly is used to unlock the display and allow it to pull out into the tilted position as illustrated in Figures 1-20 and 1-21.

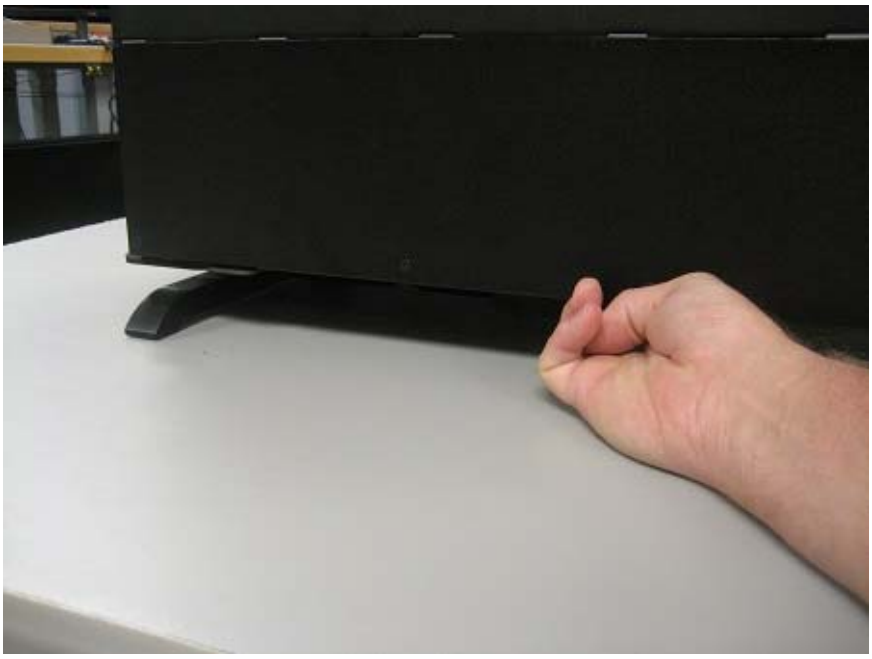

Figure 1-20

Figure 1-21

2) Observe the display assembly in its tilted position as illustrated in Figure 1-22.

Figure 1-22

3) Depress the latch and open the right-hand screen as illustrated in Figure 1-23.

Figure 1-23

Figure 1-24

4) On the top of each display you will observe a row of buttons; these can be used to adjust display settings or bring up that display's OSD (on-screen display) menu. By default, the OSDs use the DP input (even while connected to the Display Port or DVI outputs from the graphics card). If no OSD data is present, a quick solution is to power off the display and power it back on, at which time the display will then scan for an active signal.

Figure 1-25

Observe the display controls shown above. In particular, note the power button located to the right of the membrane switch array -- this is an independent power button for the display.

Pressing the **MENU/SEL** button (the third button from the right) will bring up a series of items on the screen. Use the **+/–** buttons to move between these items; press and release the **MENU/SEL** button to select that item; use the **+/–** buttons to vary the settings; and then press and release the **MENU/SEL** button to accept the new settings.

Removable Devices

Note: If you are removing drives for any reason (safe storage, for example), it is important to replace the drives in their original slots. A mistake here may result in failure to boot the OS due to changes in the drive ordering.

Shown below is an array with up to four 3.5” SAS or SATA disks. Normally, this drive or SSD array is connected to an optional PCIe hardware RAID controller (LSI MegaRAID 9270-8i in many cases).

1) Unscrew the thumbscrew holding the hard drive retainer bar as illustrated in Figures 1-26 and 1-27. The retainer bar can then be removed and the hard drive array can be gently slid out of its bay as illustrated in Figure 1-28.

Figure 1-26

Figure 1-27

Figure 1-28

2) In the event that you need to replace a disk, remove the binder bar by unscrewing the four captured screws as illustrated in Figures 1-29 and 1-30.

Figure 1-29

Figure 1-30

3) A single drive can then be removed by sliding it out of the sleeve as shown below. Replacing a disk requires removal of the four screws attaching the drive to the carrier.

Figure 1-31

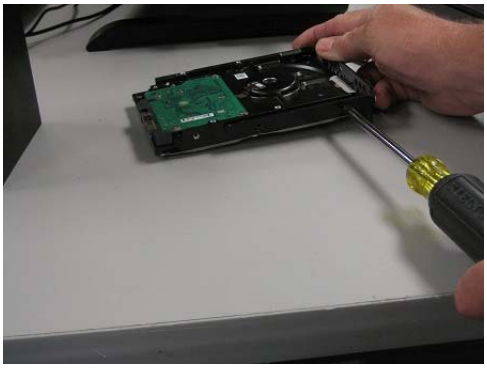

Figure 1-32

Note: To the left of the power supply is the system drive array. This can comprise one or two hard drives or SSDs (9mm thick maximum). Alternatively, a single 15mm drive can be used (there is not enough space for two 15mm drives). These drives are normally connected to the motherboard SATA ports. With two drives, the drive labels face each other and RAID 1 would be the standard configuration.

4) Unscrew the two thumbscrews holding the OS drive array as illustrated below. The hard drive array can then be gently slid out of its bay.

Figure 1-33

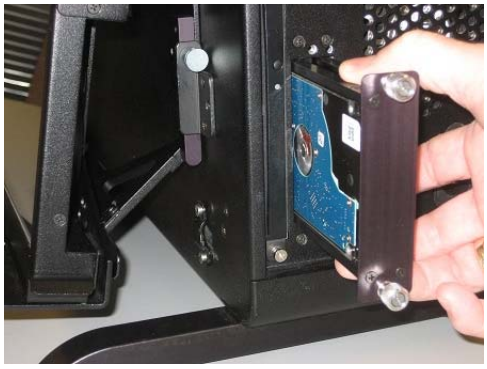

Figure 1-34

5) Shown below is one 9mm drive. These drives are secured with Allen head screws.

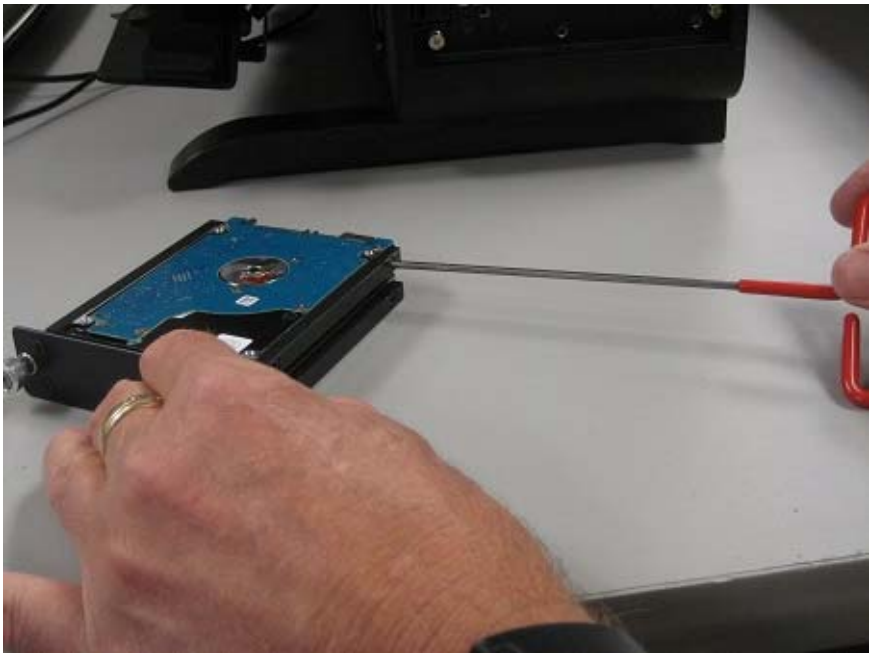

Figure 1-35

6) A similar process is used to remove the optical drive. Unscrew the captured screws (these are *not* thumbscrews, so a screwdriver is normally required for field replacement of the optical drive).

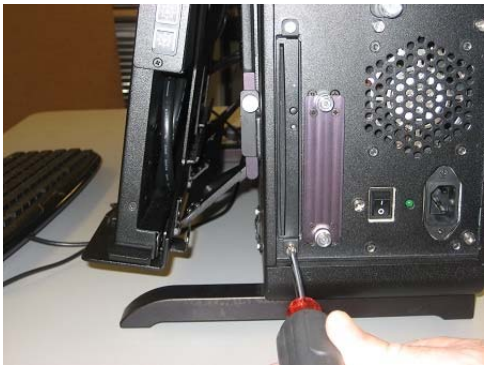

Figure1-36

Figure 1-37

Chapter 2: Module Replacement & Upgrade Procedures

Introduction

The instructions in this chapter describe how to replace and upgrade various modules in your MaxPac system.

Note: Generally speaking, you should only access the MaxPac internals under the direction of RPC support. In some cases, performing unauthorized procedures or using components that have not been tested and approved by RPC may invalidate your warranty.

Note: Power-down your MaxPac system (shut down Windows®) and then remove the power cable before performing any of the procedures discussed in this chapter. Also please be aware of static discharge when working on your MaxPac. In general, touch the metal part of the chassis to discharge any static prior to handling any delicate electronic parts.

Note: When accessing the system internals and/or performing module upgrade procedures, you are quickly going to end up with a lot of screws and other small items. In order to keep track of things and to prevent misplacing any parts, it is strongly recommended to have a plastic container divided into small compartments and to label these compartments as you work.

Required Tools and Techniques

Most of the module replacement and upgrade procedures discussed in this chapter can be performed using only a pair of #1 (small tip) and #2 (regular tip) Phillips screwdrivers. However, some procedures will require additional tools as discussed in *Appendix C*.

Note: It is extremely important that you use only high-quality tools so as to avoid any slippage and stripping of screw heads and threads. Furthermore, in order to avoid any slippage, it is VERY important to apply adequate force in the form of **firm and steady pressure**. See *Appendix C* for details on the tools required to service the system.

Note: It is highly recommended that you use magnetized screwdrivers so as to prevent screws from dropping inside the case and/or aiding in retrieving them if they do drop inside the case. (If your screwdriver isn't already magnetized, you can make it so by repeatedly "stroking" the blade with a permanent magnet.

Note: For additional immunity to vibration, many screws in a MaxPac system are secured with removable blue LOCTITE. If you remove any screws, then you should reapply LOCTITE prior to replacing those screws.

Names and Types of Screws

MaxPac systems use a variety of different screw types. In order to help you follow the instructions in this chapter, details on these screws are provided in *Appendix C*.

Removing the Display Assembly

Note: Removing the Display Assembly is *not* necessary for servicing the inside of the chassis. The access panel on the opposite side of the main chassis allows access for service.

1) In preparation for the removal of the display assembly, the display cables must be detached. The graphics board in this configuration is the Quadro K2000. It can support three simultaneous displays using one DVI-D connectors and one two DP connectors.

Figure 2-1

2) Remove the DVI cable and the DP cable as shown in Figures 2-1 and 2-2. The monitor AC power should be removed by depressing the spring loaded latch and pulling the connector out as illustrated in Figures 2-3 and 2-4.

Figure 2-2

Figure 2-3

Figure 2-4

3) In order to remove the display assembly (dual vertical displays in this case), first close the upper display onto the lower display and lock in place. As was discussed in the previous chapter, pull the display assembly into its tilted position as illustrated in Figure 2-5.

Figure 2-5

Figure 2-6

4) On both the left- and right-hand sides of the system, behind the display assembly, spring-loaded plungers hold the assembly to the main chassis. Pull each of the silver "plunger latches" outward into their unlocked/open positions and rotate them to secure them in this position.

Figure 2-7

Figure 2-8

5) Now the display assembly can be lifted off of the hanger brackets on each side of the top of the assembly. Carefully lift the assembly away and place it on a flat surface. Any repair of the display assembly should be under the direction of RPC's support team.

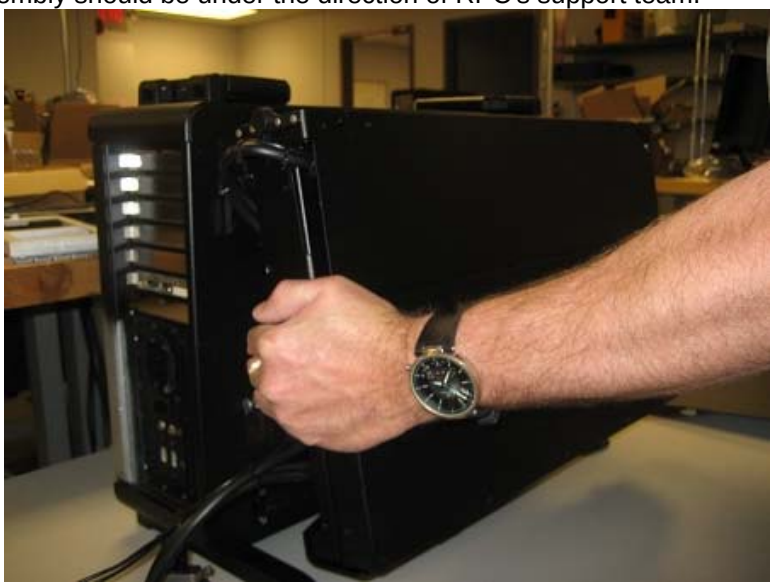

Figure 2-9

Figure 2-10

Accessing the Inside of the Chassis

1) Accessing the interior of the main chassis is easy. Loosen the two captured thumbscrews as shown in Figure 2-11. Using the tips of your fingers, pull the rear cover outward until it loosens and comes clear (this may take a little force due to the EMI gasket material).

Figure 2-11

Figure 2-12

Motherboard Quick Reference

The MaxPac 8000 SL normally features a Supermicro X9SRL (single CPU) motherboard. A drawing of this motherboard is presented in Figures 2-13 and 2-14 for reference purposes. An alternative configuration is the MaxPac 8200 SL which normally features a Supermicro X9DRL (dual CPU) motherboard as illustrated in Figures 2-15 and 2-16.

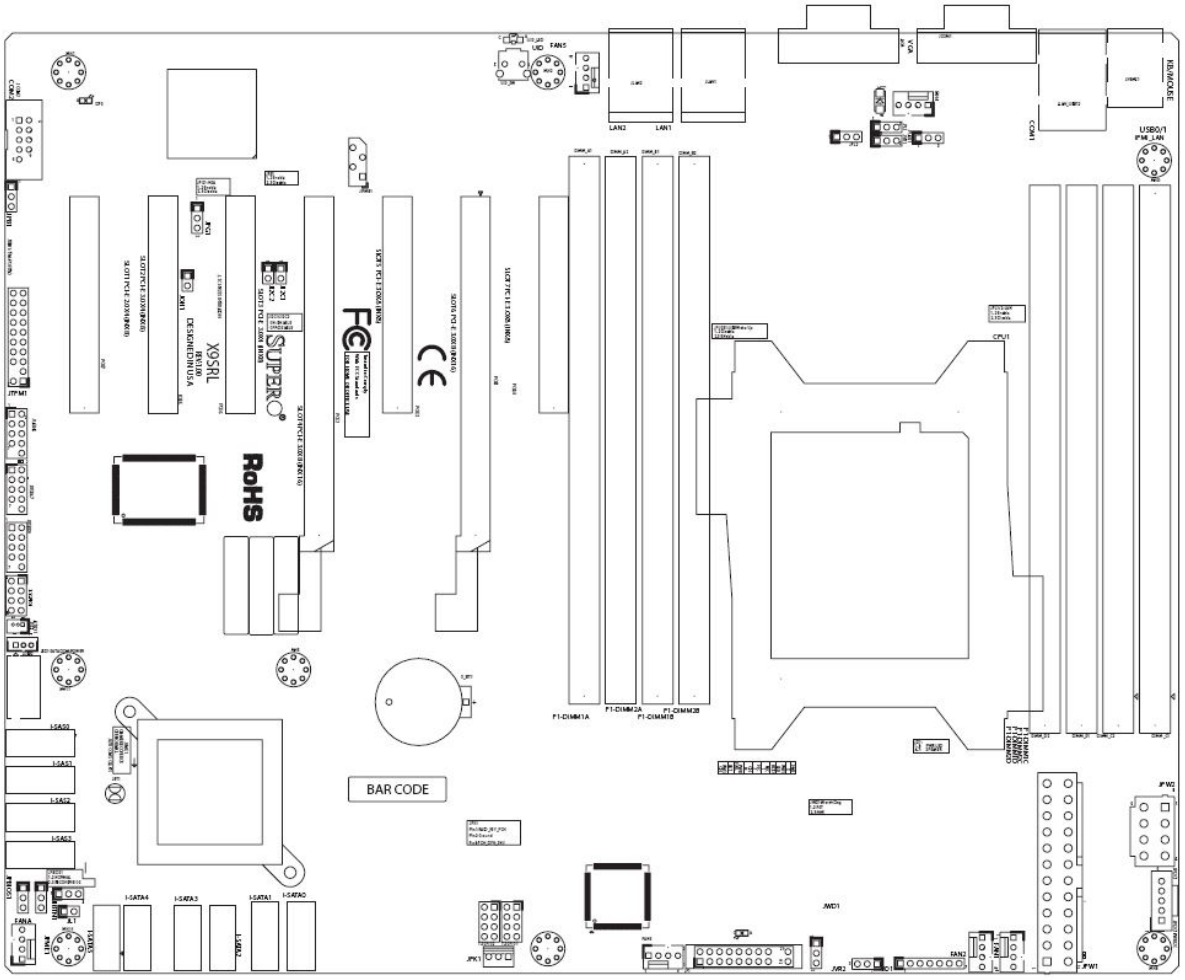

Figure 2-13 Supermicro X9SRL (Single CPU MaxPac 8000 SL)

Figure 2-14 shows a photo of this motherboard shown rotated as it is positioned in the MaxPac 8000 SL's chassis.

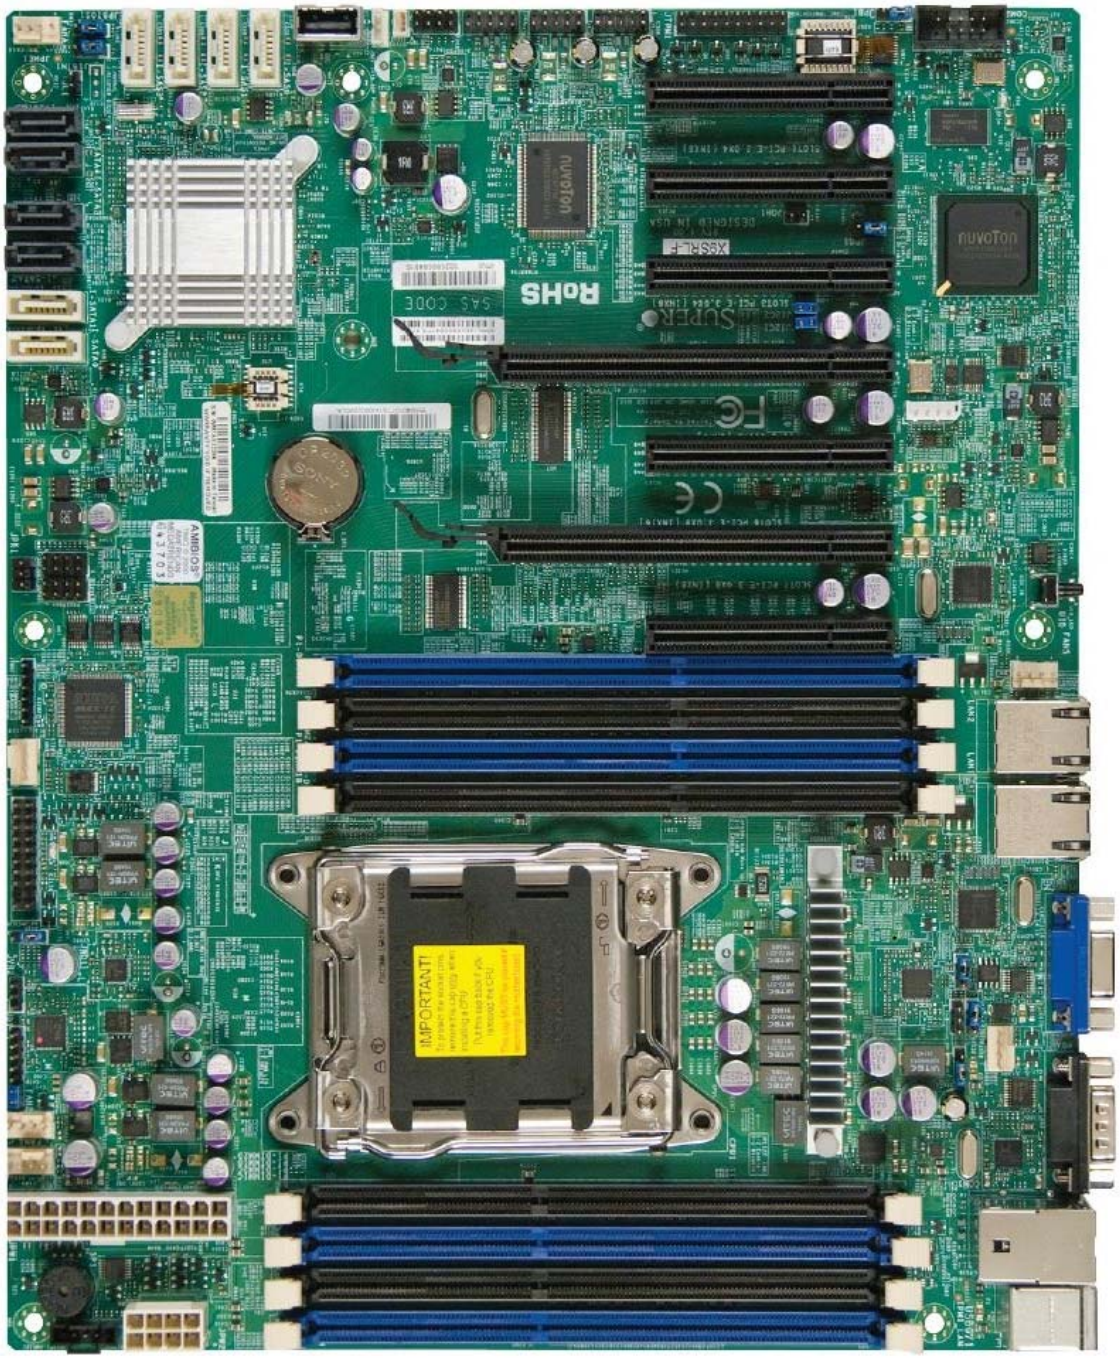

Figure 2-14 Supermicro X9SRL (Single CPU MaxPac 8000 SL)

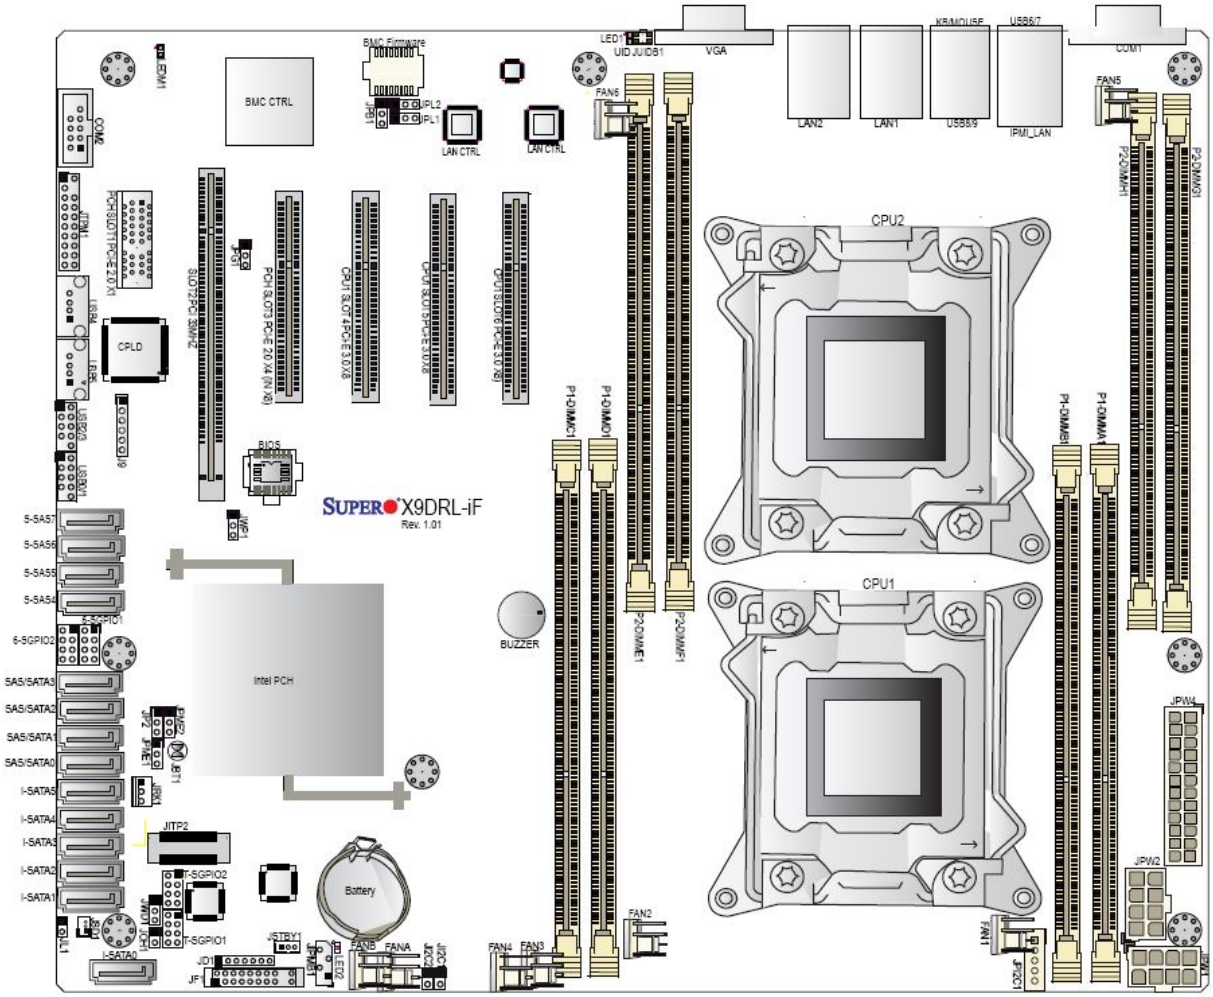

Figure 2-15 Supermicro X9DRL (Dual CPU MaxPac 8200 SL)

Figure 2-16 shows a photo of this motherboard shown rotated as it is positioned in the MaxPac 8200 SL's chassis.

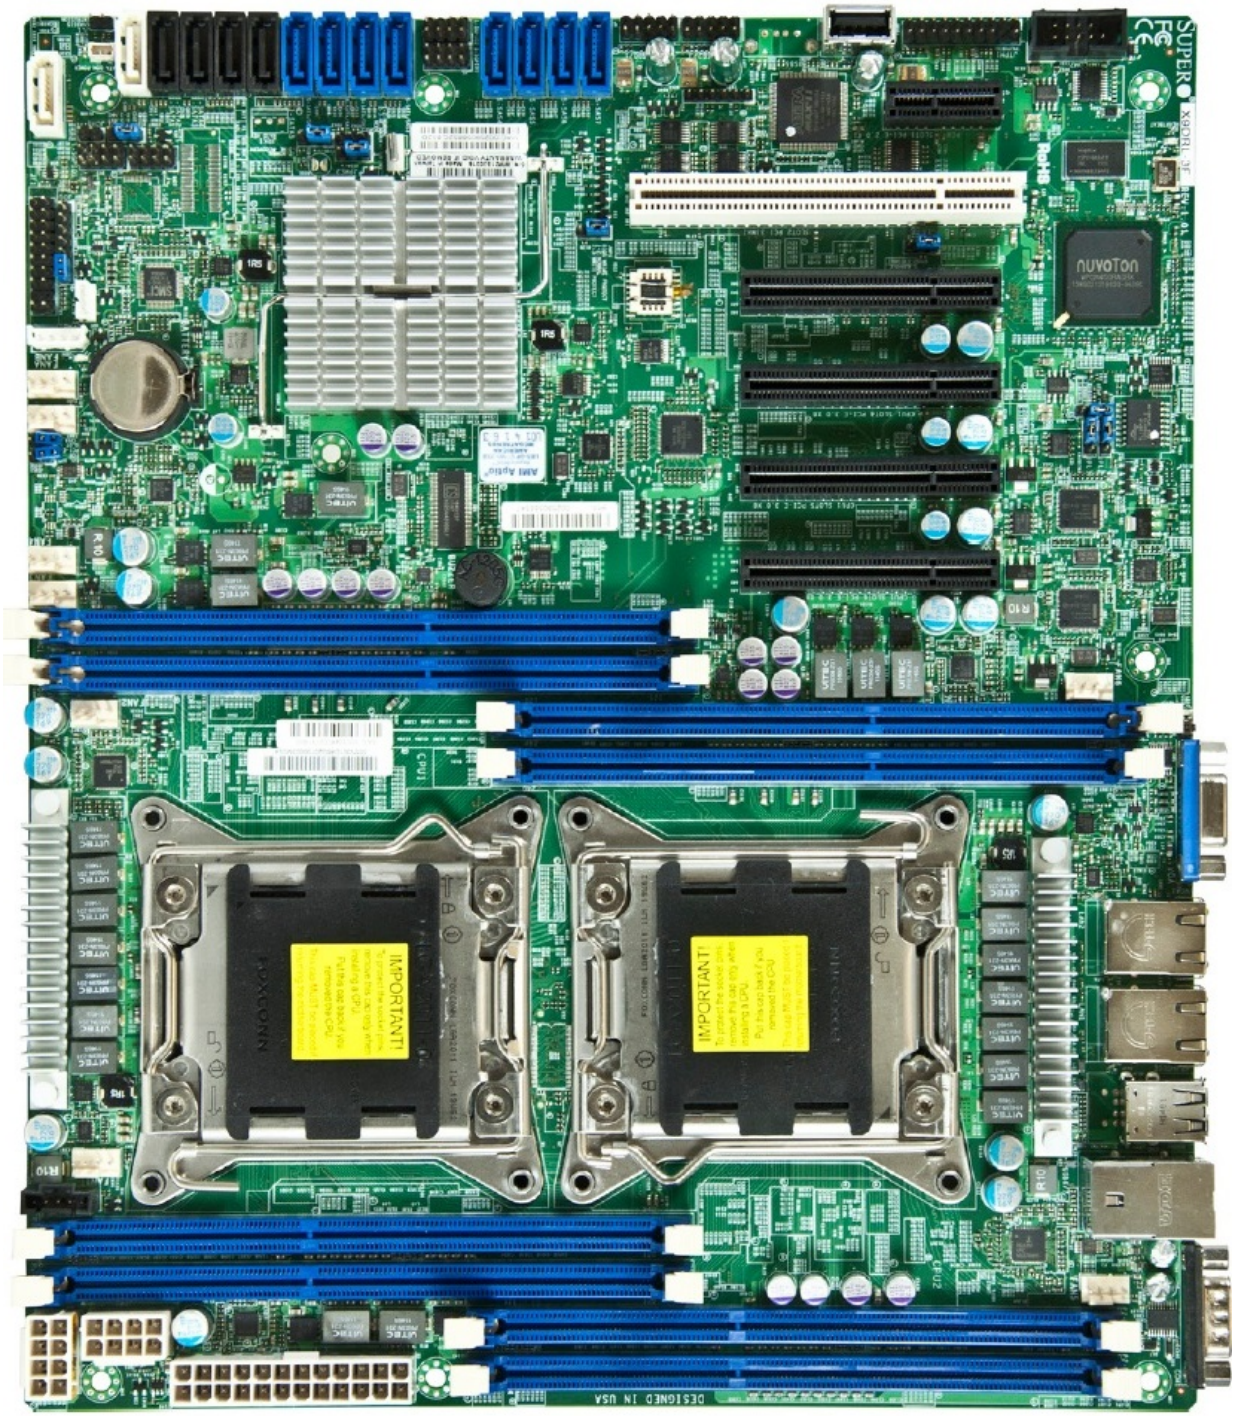

Figure 2-16 Supermicro X9DRL (Dual CPU MaxPac 8200 SL)

Adding/Replacing Memory Sticks

Note: The following section illustrates the MaxPac 8000 SL. MaxPac 8200 SL is similar except for the position of the memory slots and PCIe slot configuration.

Note: Due to the fact that high-end computer systems can experience a host of memory compatibility issues and problems, you should only use replacement and/or additional memory sticks supplied by RPC.

In the unlikely event that you begin to experience problems with the memory that is already resident in your MaxPac, you must first determine which stick has failed under the direction of RPC support.

1) In order to remove and replace a memory stick, gently press down-and-out on the two plastic "Release Tabs" at either side of the stick as illustrated in Figures 2-19 and 2-20. This will cause the stick to pop out, after which you may gently remove the stick from the system.

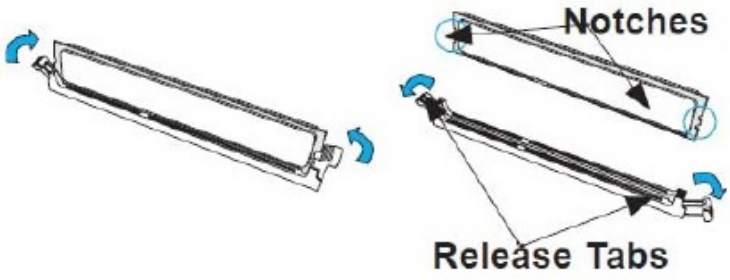

Figure 2-17

Figure 2-18

2) Take the memory sticks provided by RPC support and incorporate them into the system by performing the steps described above in reverse order. Make sure that the motherboard memory latch tab is locked into the slot in the memory stick.

Figure 2-19

Figure 2-20

Removing/Replacing PCIe Cards

Note: The following section illustrates the MaxPac 8000 SL. MaxPac 8200 SL is similar except for the position of the memory slots and PCIe slot configuration.

1) For the purposes of these discussions, we will replace the PCIe graphics card from the bottom PCIe x16 slot. First remove the card slot cover by unscrewing the thumbscrew and sliding the cover to the left as illustrated in Figures 2-21 and 2-22. The following section illustrates the MaxPac 8000 SL. MaxPac 8200 SL is similar except for the position of the memory slots and PCIe slot configuration.

.

Figure 2-21

Figure 2-22

Figure 2-23

2) Remove the screw securing the PCIe card. Remove the card as illustrated in Figures 2-23 and 2-24. Release the PCIe x16 slot latch at the rear of the graphics card in order to remove the card.

Figure 2-24

NOTE: Some PCIe cards require auxiliary power and may have a power cable from the power supply to the card. Disengage such cables when removing the PCIe card and re-engage them

after replacing (or installing) such a card.

NOTE: Observe the PCIe slot configuration with two PCIe x16 and five PCIe x8 slots as illustrated in Figure 2-25. In the case of this particular example, the graphics card fits into the bottom PCIe x16 slot..

Figure 2-25

Removing/Replacing the Power Supply

1) In preparation for power supply removal, the vertical bracket must be removed by unscrewing the four screws as shown below.

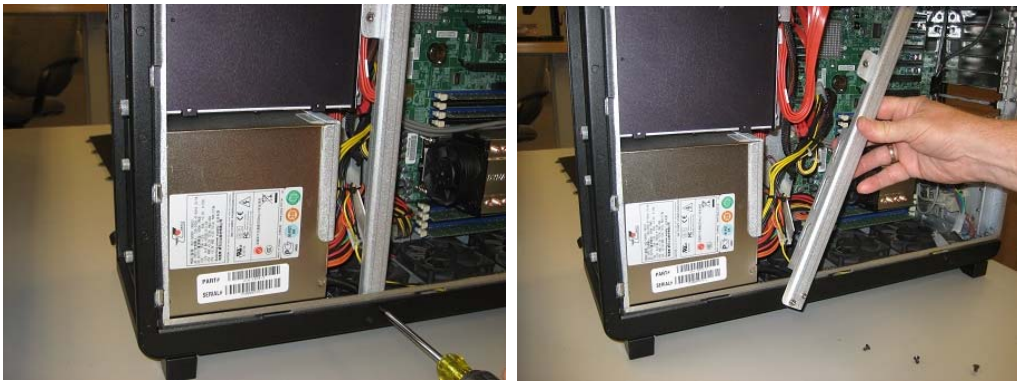

Figure 2-26

2) Now cut the cable tie securing the DC connector bundle as shown below.

Figure 2-27

3) Disconnect the large inline DC cable connectors as shown below. Observe that these mating connectors are keyed and include a latch.

Figure 2-28

Note: The following section illustrates the MaxPac 8000 SL. MaxPac 8200 SL is similar except it has TWO 8-pin 12V CPU power connections instead of just ONE.

4) Observe the location of the motherboard's DC power connectors as shown below. The top connector is the main 24-pin power for the motherboard and options. The 8-pin connector supplies 12V power to the CPUs' low voltage regulators. Note the keying and latches for each connector. Also, some silicon adhesive may be present on the outside of the connectors -- this flexible adhesive will stretch and break free with a little extra force.

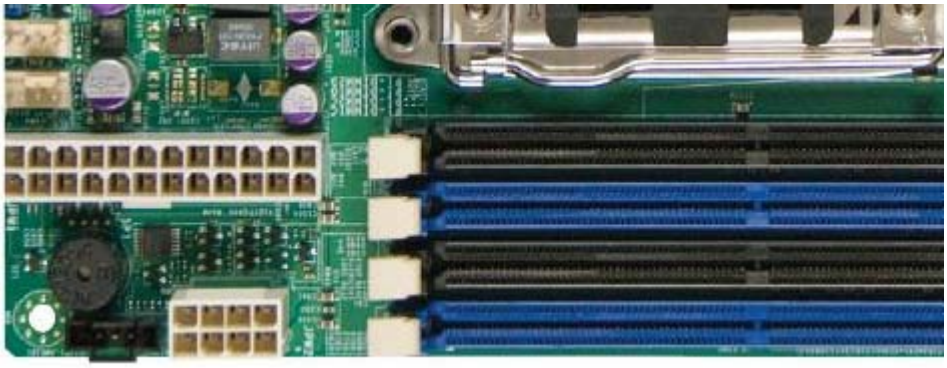

Figure 2-29

5) Figures 2-30 and 2-31 illustrate the removal of the DC power cables from the motherboard.

Figure 2-30

6) Observe the 24-pin power connector and the 8-pin connector after their removal from the motherboard.

Figure 2-31

7) Unscrew the two thumbscrews and remove the power supply rear retainer bracket as illustrated in Figures 2-32 and 2-33.

Figure 2-32

Figure 2-33

8) Unscrew the four captured screws (noted by the red circles) securing the power supply to the chassis as illustrated in Figure 2-34.

Figure 2-34

9) An internal AC power cable provides power to the displays and must also be disconnected. First remove the two screws securing the relay to as illustrated in Figure 2-35.

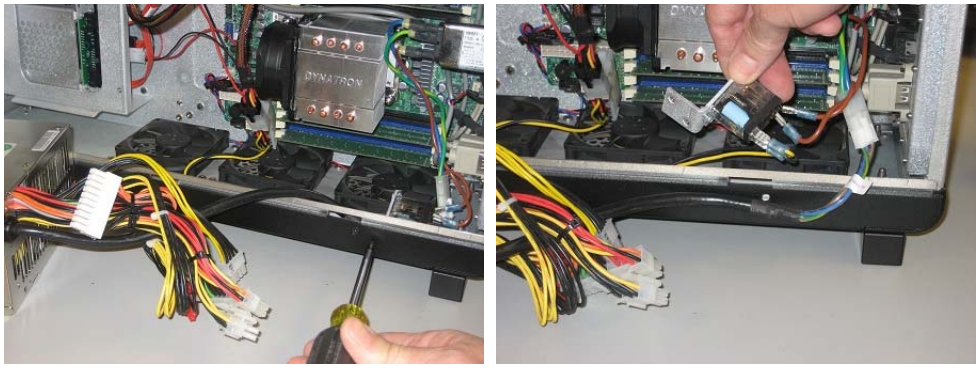

Figure 2-35

10) Separate the cable connectors providing AC power to the displays as illustrated in Figure 2-36.

Figure 2-36

11) Now the power supply can be removed from the inside of the chassis as illustrated in Figure 2-37.

Figure 2-37

Appendix A: Creating and Using Backup Images (Including Restoring Your OS)

Introduction

Every Windows based system comes equipped with an *RPC Recovery DVD*. In addition to an image of your operating system, this disc also contains a copy of the *Acronis True Image*™ application from Acronis (www.acronis.com). *Acronis True Image* is a superb tool for operating system (OS) deployment, software distribution, back-up, and disaster recovery. In particular, this utility allows you to make reliable backups of your system drives, including applications and critical data. There are two primary scenarios that need be considered as follows:

Restoring the RPC-supplied Image

This is the worst-case scenario. It assumes that your system has undergone some catastrophic failure such that – under the direction of RPC support – you are going to replace your primary hard drive(s) and/or restore the original RPC-supplied image. In this case, you will lose any applications and data that you have installed, loaded, or created on your main “C:” drive/partition.

Note: If you do re-load the original RPC-supplied image, you will also have to re-run the initialization procedures – including re-activating/re-registering your OS license.

Power-down the system.

1) Ensure that the bootable recovery DVD supplied in the accessory pack is in the system's CD/DVD drive.
2) Power-up the system. This will automatically launch the Acronis application as shown in Figure A-1.

Figure A-1

Confirmation
Restoring your computer to the original state will remove all files that were created on your computer. Do you want to proceed with restoring?
Yes
No
True Image
www.acronis.com
Turn Off Computer
Restore the original system installation.

Figure A-2

3) Select **Yes** in the dialog shown in Figure A-2 to allow Acronis to completely restore your disk.
4) Figures A-3 and A-4 show the completing steps for restoring you image back to the RPC configuration as originally shipped.

Figure A-3

Figure A-4

Creating Your Own Image

This scenario assumes that you have added new applications, loaded or created new datasets, and generally configured and customized your MaxVision system the way you like it. At this stage, before you deploy the system, it is strongly recommended that you use the *Acronis True Image* application to create an image of the system. Similarly, as you add additional applications or generate additional datasets, it is strongly recommended that you create periodic backup images. This greatly facilitates your ability to return the system to a “known good state” should any problems arise (such as a virus attack or a hard drive failure) at some stage in the future.

You can create an image to another SATA disk or USB disk directly or even a networked disk. For the purposes of this example, we will assume that you are writing your image to CD media (as opposed to DVD), and that the image will occupy two CDs.

1) Power-down the system.
2) In this case you will need to create your own Acronis Recovery bootable DVD media or bootable USB memory stick from the Acronis Windows application
3) Ensure that the bootable recovery DVD supplied in the accessory pack is in the system's CD/DVD drive. In the case of a multiple DVD image, ensure Disk #1 is in the drive.
4) Power-up the system. This will automatically launch the Acronis application as shown in Figure A5. Use the mouse to select the Acronis item as shown in Figure A-5.

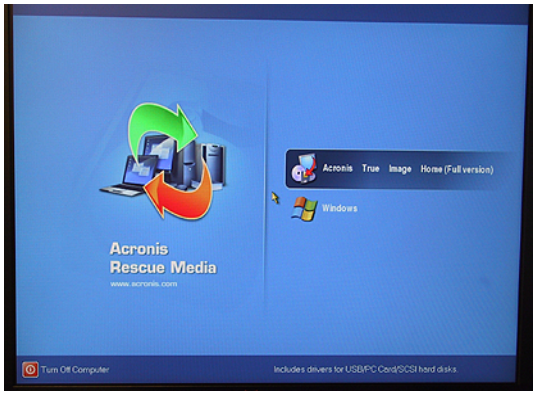

Figure A-5

Figure A-6

5) Following the splash screen (Figure A-6), under the **Pick a Task** heading, select the **Backup** option (the top item) as illustrated in Figure A-7.

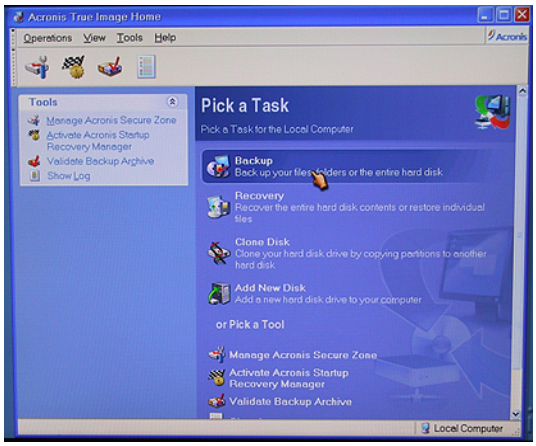
Acronis True Image Home
Operations View Tools Help
Tools
Manage Acronis Secure Zone
Activate Acronis Startup Recovery Manager
Validate Backup Archive
Show Log
Pick a Task
Pick a Task for the Local Computer
Backup
Back up your files, folders or the entire hard disk
Recovery
Recover the entire hard disk contents or restore individual files
Clone Disk
Clone your hard disk drive by copying partitions to another hard disk
Add New Disk
Add a new hard disk drive to your computer
or Pick a Tool
Manage Acronis Secure Zone
Activate Acronis Startup Recovery Manager
Validate Backup Archive
Local Computer

Figure A-7

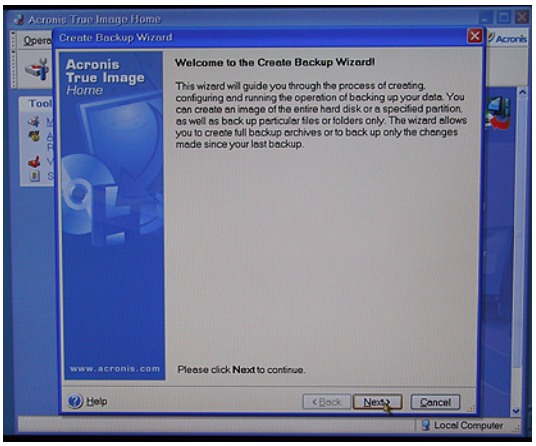
Acronis True Image Home
Create Backup Wizard
Acronis True Image Home
Welcome to the Create Backup Wizard!
This wizard will guide you through the process of creating, configuring and running the operation of backing up your data. You can create an image of the entire hard disk or a specified partition, as well as back up particular files or folders only. The wizard allows you to create full backup archives or to back up only the changes made since your last backup.
www.acronis.com
Please click Next to continue.
Help
< Back
Next >
Cancel
Local Computer

Figure A-8

6) Follow the actions depicted by the screenshots shown in Figures A-8 through A-22.

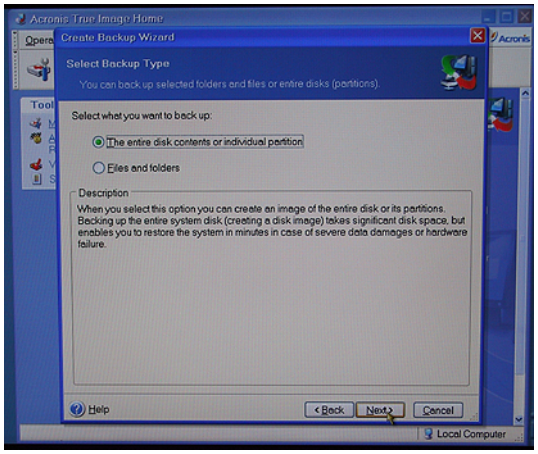
Acronis True Image Home
Create Backup Wizard
Select Backup Type
You can back up selected folders and files or entire disks (partitions).
Select what you want to back up:
The entire disk contents or individual partition
Files and folders
Description
When you select this option you can create an image of the entire disk or its partitions. Backing up the entire system disk (creating a disk image) takes significant disk space, but enables you to restore the system in minutes in case of severe data damages or hardware failure.
Help
< Back
Next >
Cancel
Local Computer

Figure A-9

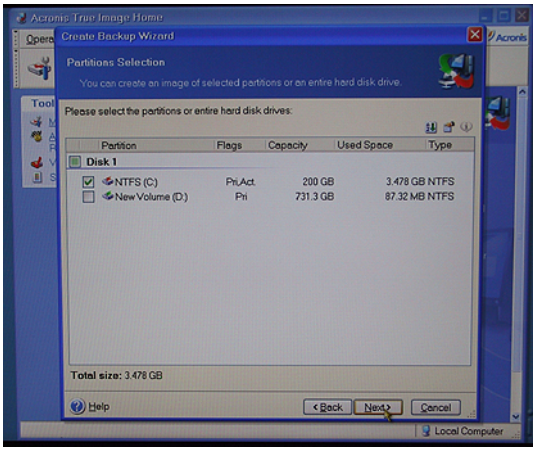

Figure A-10

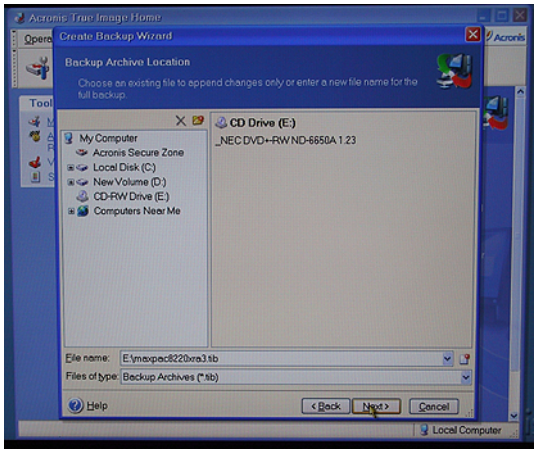

Figure A-11

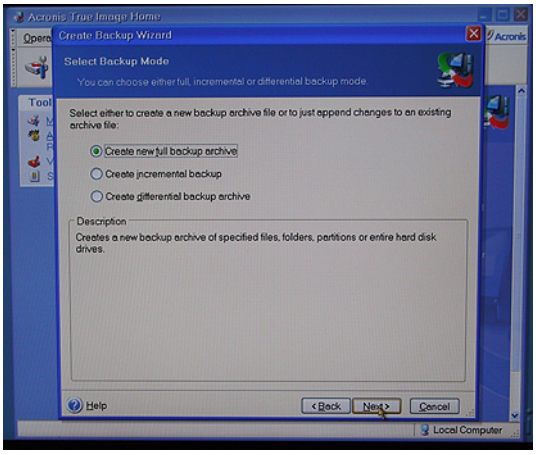
Acronis True Image Home
Create Backup Wizard
Select Backup Mode
You can choose either full, incremental or differential backup mode.
Select either to create a new backup archive file or to just append changes to an existing archive file:
Create new full backup archive
Create incremental backup
Create differential backup archive
Description
Creates a new backup archive of specified files, folders, partitions or entire hard disk drives.
Help
< Back
Next >
Cancel
Local Computer

Figure A-12

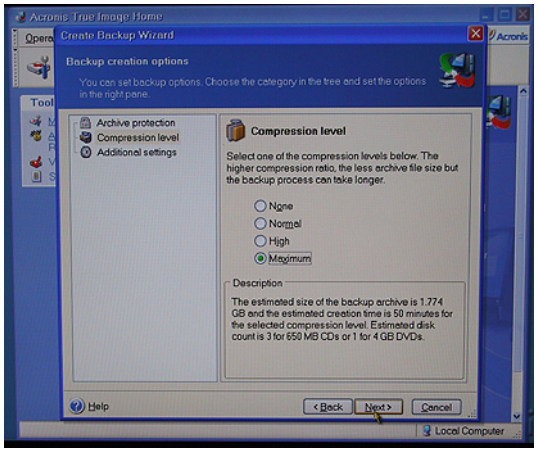
Acronis True Image Home
Create Backup Wizard
Backup creation options
You can set backup options. Choose the category in the tree and set the options in the right pane.
Archive protection
Compression level
Additional settings
Compression level
Select one of the compression levels below. The higher compression ratio, the less archive file size but the backup process can take longer.
None
Normal
High
Maximum
Description
The estimated size of the backup archive is 1,774 GB and the estimated creation time is 50 minutes for the selected compression level. Estimated disk count is 3 for 650 MB CDs or 1 for 4 GB DVDs.
Help
< Back
Next >
Cancel
Local Computer

Figure A-13

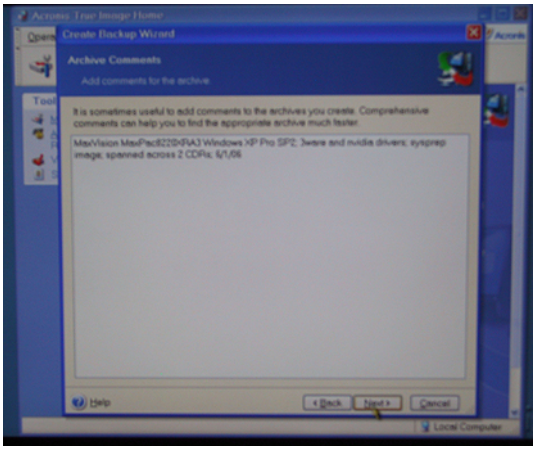
Acronis True Image Home
Create Backup Wizard
Archive Comments
Add comments for the archive
It is sometimes useful to add comments to the archives you create. Comprehensive comments can help you to find the appropriate archive much faster.
MaxVision MaxPac8220iXRA3 Windows XP Pro SP2; 3ware and nvidia drivers; sysprep image; spanned across 2 CDRs; 6/1/06
Help
< Back
Next >
Cancel
Local Computer

Figure A-14

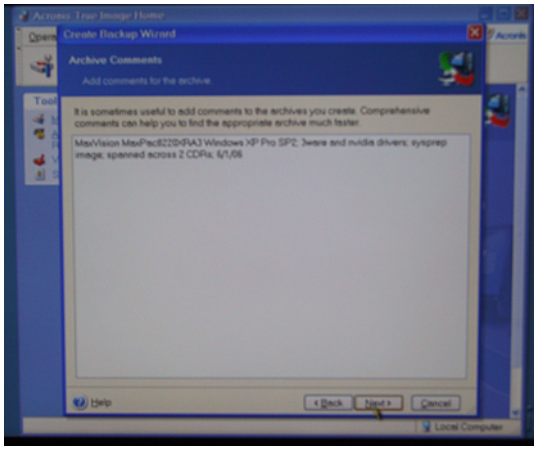
Acronis True Image Home
Create Backup Wizard
Archive Comments
Add comments for the archive
It is sometimes useful to add comments to the archives you create. Comprehensive comments can help you to find the appropriate archive much faster.
MaxVision MaxPac8220iXRA3 Windows XP Pro SP2; 3ware and nvidia drivers; sysprep image; spanned across 2 CDRs; 6/1/06
Help
< Back
Next >
Cancel
Local Computer

Figure A-15

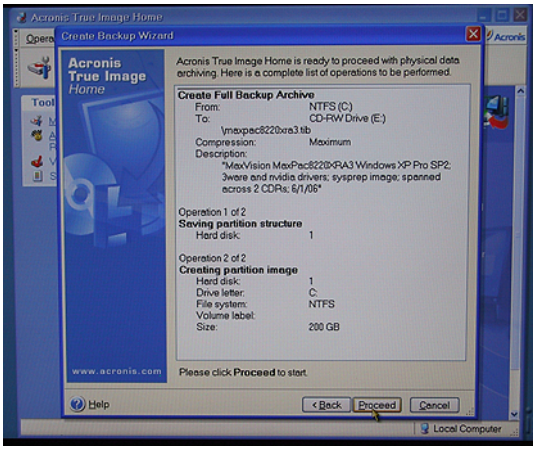

Figure A-16

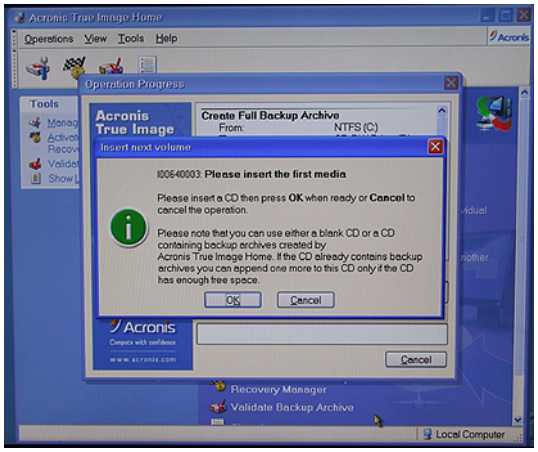
Acronis True Image Home
Operations View Tools Help
Operation Progress
Acronis True Image
Create Full Backup Archive
From: NTFS (C:)
Insert next volume
I00640003: Please insert the first media
Please insert a CD then press OK when ready or Cancel to cancel the operation.
Please note that you can use either a blank CD or a CD containing backup archives created by Acronis True Image Home. If the CD already contains backup archives you can append one more to this CD only if the CD has enough free space.
OK
Cancel
Acronis
Cancel
Recovery Manager
Validate Backup Archive
Local Computer

Figure A-17

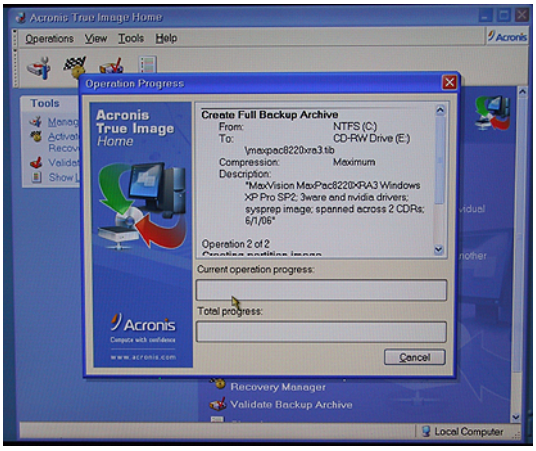

Figure A-18

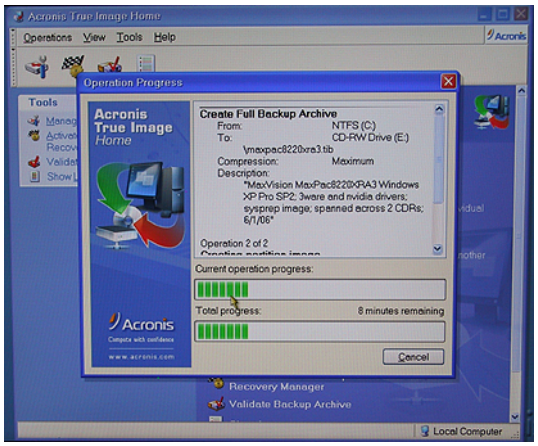

Figure A-19

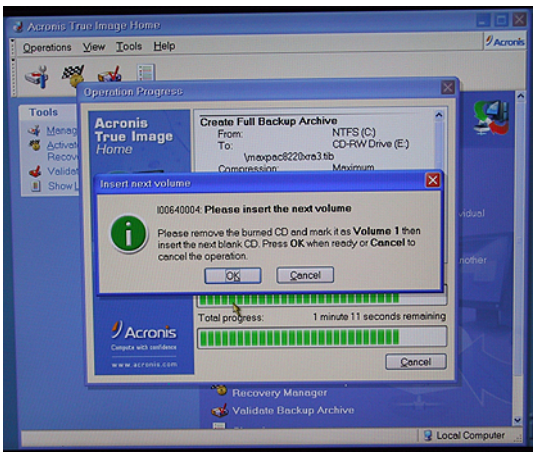
Acronis True Image Home
Operations View Tools Help
Operation Progress
Create Full Backup Archive
Insert next volume
I00640004: Please insert the next volume
Please remove the burned CD and mark it as Volume 1 then insert the next blank CD. Press OK when ready or Cancel to cancel the operation.
OK
Cancel
Total progress: 1 minute 11 seconds remaining
Recovery Manager
Validate Backup Archive
Local Computer

Figure A-20

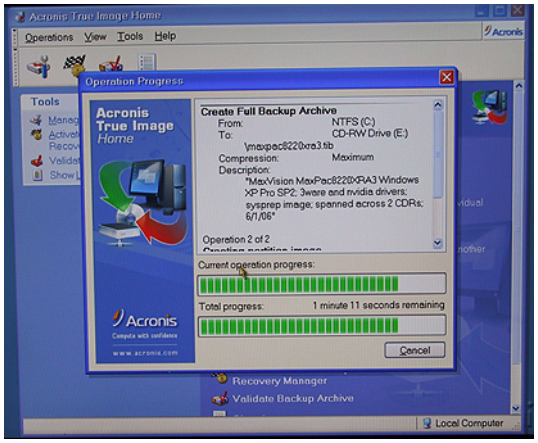

Figure A-21

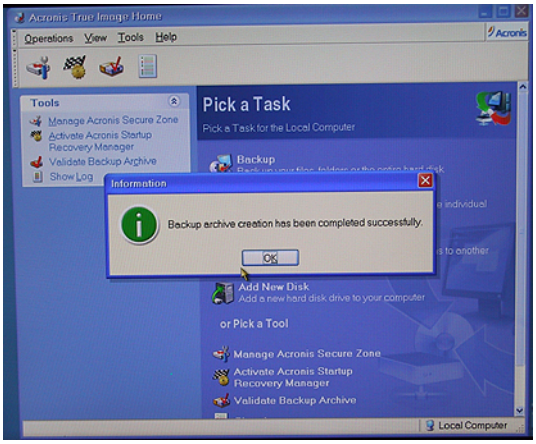

Figure A-22

Restoring Your Own Image

Note: If you do re-load an image (containing the OS) that you have created yourself following your original activation and registration of the OS, you will NOT be required to re-activate and re-register the OS so long as you are restoring the image to the original machine. However, you will be required to re-activate and re-register the OS if you re-load the image onto a different machine. Prior to shipment from RPC, the Microsoft SYSPREP utility is used to clear out the license number and other settings following system test. If you create your own image, and if SYSPREP is not run, and you subsequently load your image onto another MaxPac system, then Microsoft will require activation before use (no 30-day grace period). At this time, you will need to supply the correct OS license number for the MaxPac and activate prior to use (this procedure may vary depending on the version and license type of Windows used).

For the purposes of this example, we will assume that you are restoring your image from CD media (as opposed to DVD), and that the image occupies two CDs.

1) Power-down the system.

2) Ensure that the bootable recovery DVD supplied in the accessory pack is in the system's CD/DVD drive. In the case of a multiple DVD image, ensure Disk #1 is in the drive.

3) Power-up the system. This will automatically launch the Acronis application as shown in Figure A-23. Use the mouse to select the Acronis item as shown in Figure A-23.

Figure A-23

Figure A-24

4) Following the splash screen (Figure A-24), under the **Pick a Task** heading, select the **Restore** option (the top item) as illustrated in Figure A-25.

5) Follow the actions depicted by the screenshots shown in Figures A-25 through A-43.

Acronis True Image Home
Operations View Tools Help
Tools
Manage Acronis Secure Zone
Activate Acronis Startup Recovery Manager
Validate Backup Archive
Show Log
Pick a Task
Pick a Task for the Local Computer
Backup
Back up your files, folders or the entire hard disk
Recovery
Recover the entire hard disk contents or restore individual files
Clone Disk
Clone your hard disk drive by copying partitions to another hard disk
Add New Disk
Add a new hard disk drive to your computer
or Pick a Tool
Manage Acronis Secure Zone
Activate Acronis Startup Recovery Manager
Validate Backup Archive
Local Computer

Figure A-25

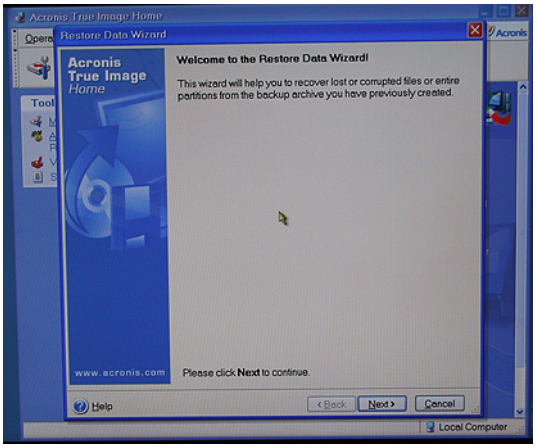
Acronis True Image Home
Restore Data Wizard
Acronis True Image Home
Welcome to the Restore Data Wizard!
This wizard will help you to recover lost or corrupted files or entire partitions from the backup archive you have previously created.
www.acronis.com
Please click Next to continue.
Help
< Back
Next >
Cancel
Local Computer

Figure A-26

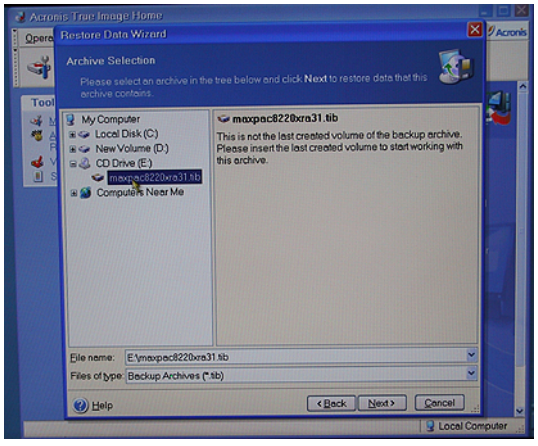
Acronis True Image Home
Restore Data Wizard
Archive Selection
Please select an archive in the tree below and click Next to restore data that this archive contains.
My Computer
Local Disk (C:)
New Volume (D:)
CD Drive (E:)
maxpac8220xra31.tib
Computers Near Me
maxpac8220xra31.tib
This is not the last created volume of the backup archive. Please insert the last created volume to start working with this archive.
File name: E:\maxpac8220xra31.tib
Files of type: Backup Archives (*.tib)
Help
< Back
Next >
Cancel
Local Computer

Figure A-27

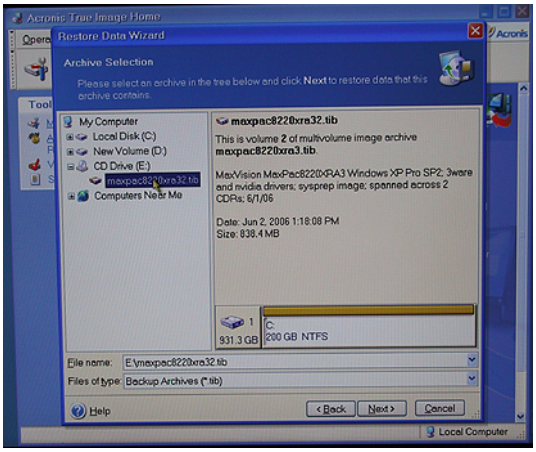
Acronis True Image Home
Restore Data Wizard
Archive Selection
Please select an archive in the tree below and click Next to restore data that this archive contains.
My Computer
Local Disk (C:)
New Volume (D:)
CD Drive (E:)
maxpac8220xra32.tib
Computers Near Me
maxpac8220xra32.tib
This is volume 2 of multivolume image archive maxpac8220xra3.tib.
MaxVision MaxPac8220XRA3 Windows XP Pro SP2; 3ware and nvidia drivers; sysprep image; spanned across 2 CDRs; 6/1/06
Date: Jun 2, 2006 1:18:08 PM
Size: 838.4 MB
1
931.3 GB
C:
200 GB NTFS
File name: E:\maxpac8220xra32.tib
Files of type: Backup Archives (*.tib)
Help
< Back
Next >
Cancel
Local Computer

Figure A-28

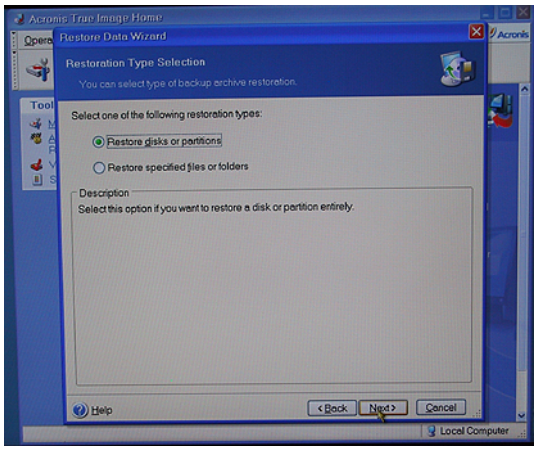
Acronis True Image Home
Restore Data Wizard
Restoration Type Selection
You can select type of backup archive restoration.
Select one of the following restoration types:
Restore disks or partitions
Restore specified files or folders
Description
Select this option if you want to restore a disk or partition entirely.
Help
< Back
Next >
Cancel
Local Computer

Figure A-29

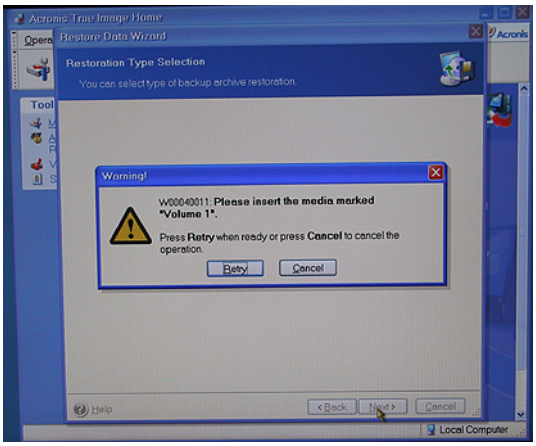

Figure A-30

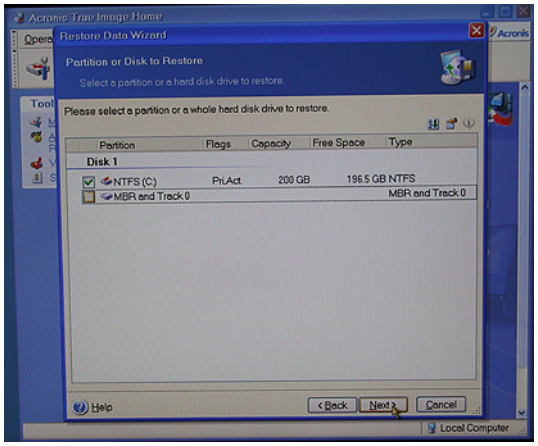

Figure A-31

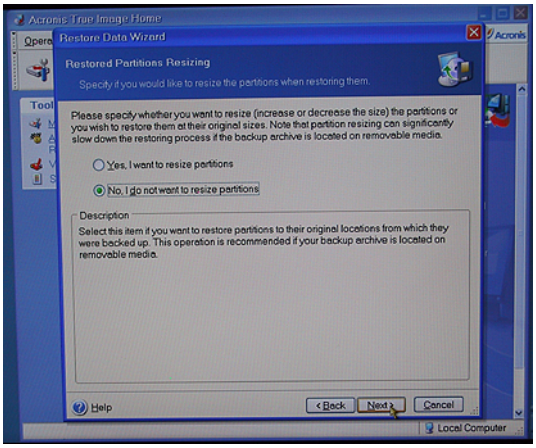
Acronis True Image Home
Restore Data Wizard
Restored Partitions Resizing
Specify if you would like to resize the partitions when restoring them.
Please specify whether you want to resize (increase or decrease the size) the partitions or you wish to restore them at their original sizes. Note that partition resizing can significantly slow down the restoring process if the backup archive is located on removable media.
Yes, I want to resize partitions
No, I do not want to resize partitions
Description
Select this item if you want to restore partitions to their original locations from which they were backed up. This operation is recommended if your backup archive is located on removable media.
Help
< Back
Next >
Cancel
Local Computer

Figure A-32

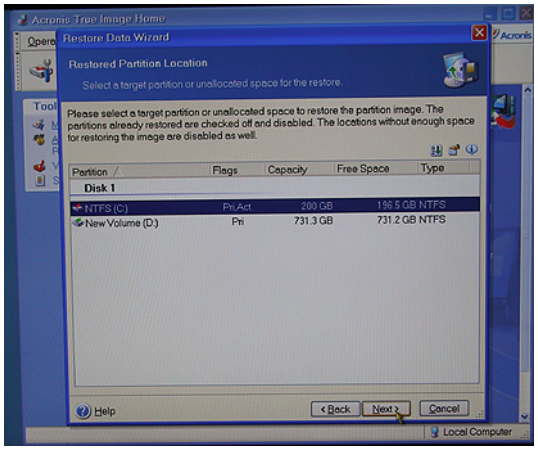

Figure A-33

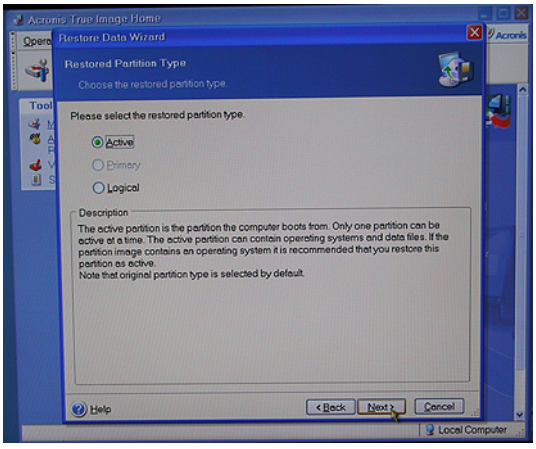
Acronis True Image Home
Restore Data Wizard
Restored Partition Type
Choose the restored partition type.
Please select the restored partition type.
Active
Primary
Logical
Description
The active partition is the partition the computer boots from. Only one partition can be active at a time. The active partition can contain operating systems and data files. If the partition image contains an operating system it is recommended that you restore this partition as active.
Note that original partition type is selected by default.
Help
< Back
Next >
Cancel
Local Computer

Figure A-34

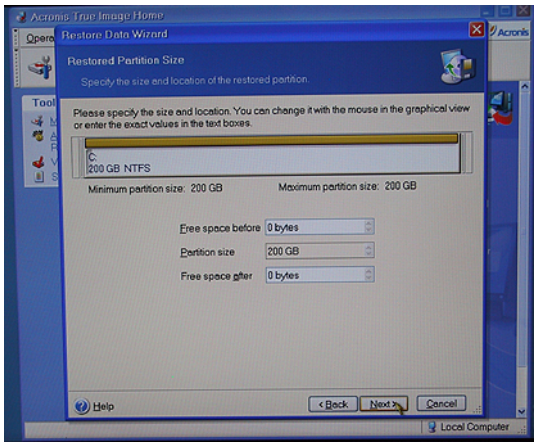
Acronis True Image Home
Restore Data Wizard
Restored Partition Size
Specify the size and location of the restored partition.
Please specify the size and location. You can change it with the mouse in the graphical view or enter the exact values in the text boxes.
C:
200 GB NTFS
Minimum partition size: 200 GB
Maximum partition size: 200 GB
Free space before 0 bytes
Partition size 200 GB
Free space after 0 bytes
Help
< Back
Next >
Cancel
Local Computer

Figure A-35

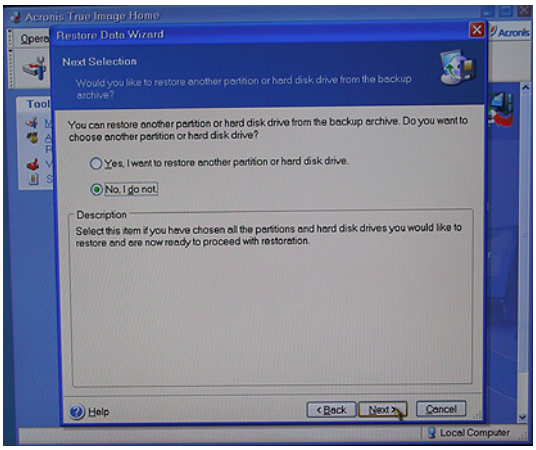
Acronis True Image Home
Restore Data Wizard
Next Selection
Would you like to restore another partition or hard disk drive from the backup archive?
You can restore another partition or hard disk drive from the backup archive. Do you want to choose another partition or hard disk drive?
Yes, I want to restore another partition or hard disk drive.
No, I do not.
Description
Select this item if you have chosen all the partitions and hard disk drives you would like to restore and are now ready to proceed with restoration.
Help
< Back
Next >
Cancel
Local Computer

Figure A-36

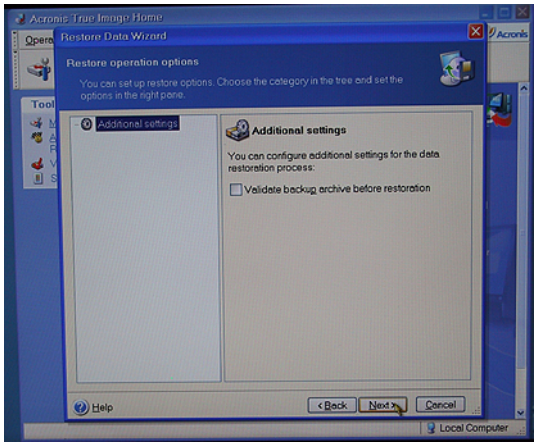
Acronis True Image Home
Restore Data Wizard
Restore operation options
You can set up restore options. Choose the category in the tree and set the options in the right pane.
Additional settings
Additional settings
You can configure additional settings for the data restoration process:
Validate backup archive before restoration
Help
< Back
Next >
Cancel
Local Computer

Figure A-37

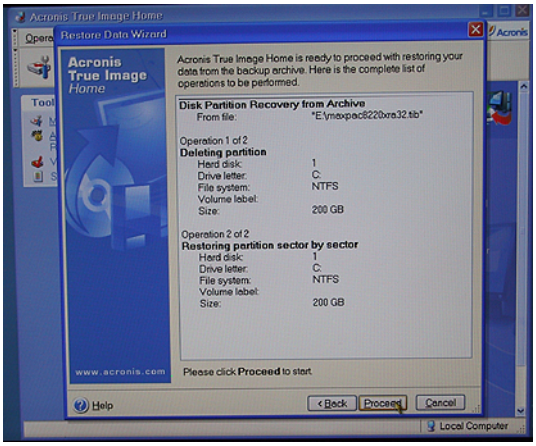

Figure A-38

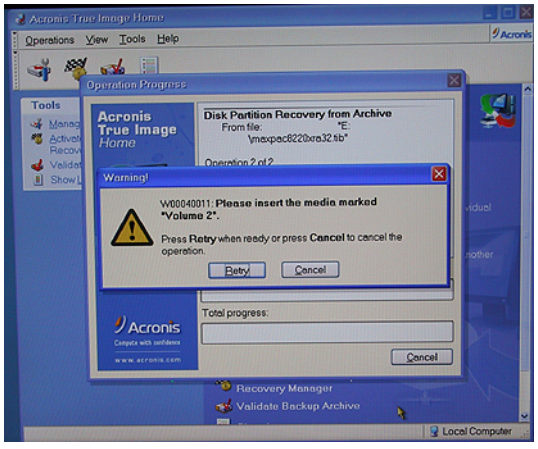

Figure A-39

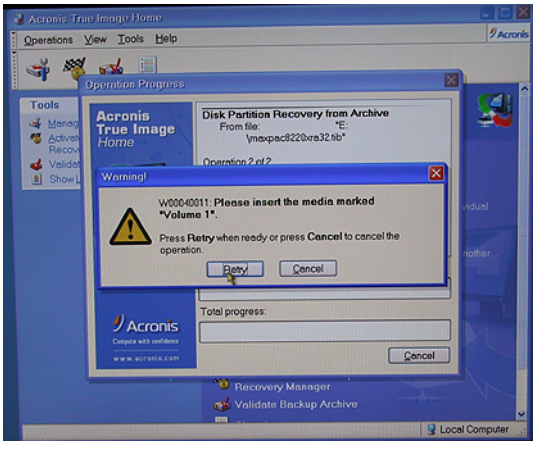

Figure A-40

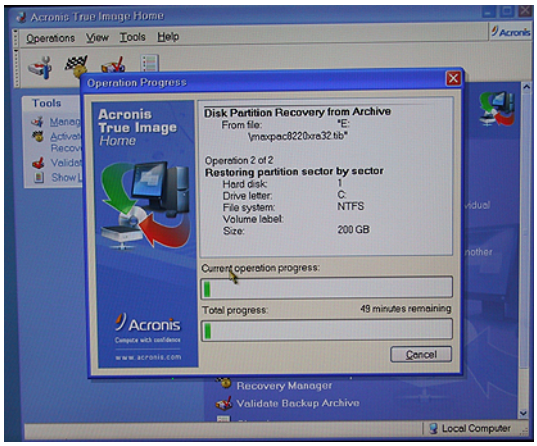

Figure A-41

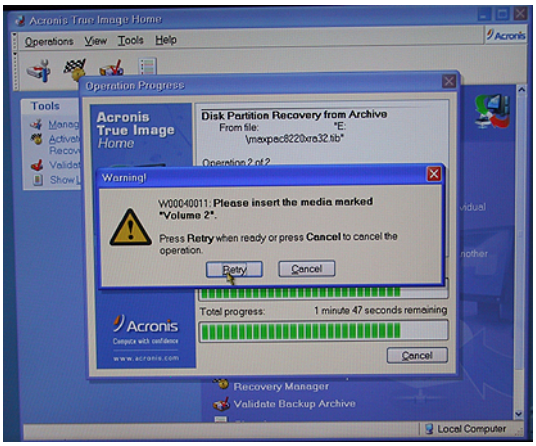

Figure A-42

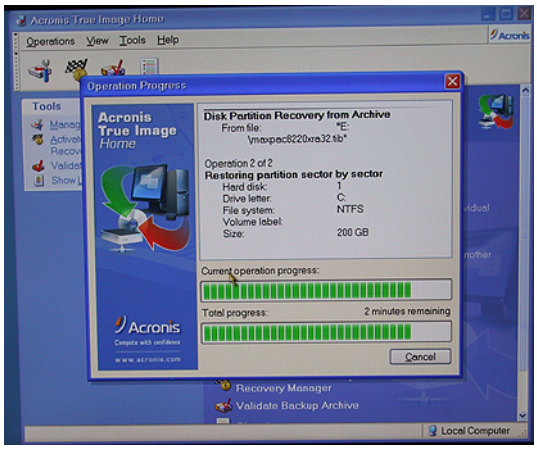

Figure A-43

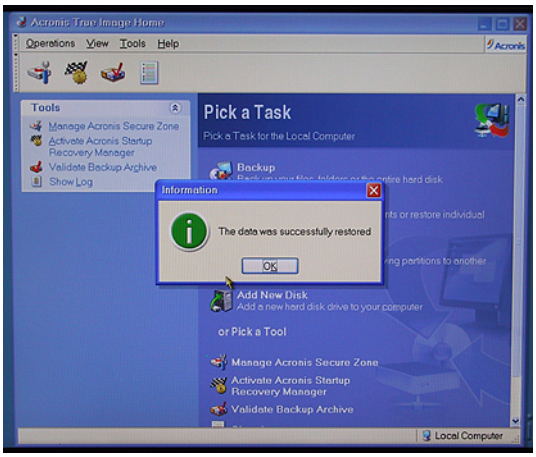

Figure A-44

Appendix B: Regular System Maintenance

Cleaning Interior Dust

You should periodically check your system for the presence of interior dust and clean the enclosure as required. The frequency of such checks will be strongly dependent on your situation. Perhaps not surprisingly, systems deployed in a desert environment, for example, will typically require such cleaning more often than systems located in less rigorous settings. Having said this, even in harsh environments, it should not be necessary to clean the system interior of dust very often so long as you maintain your dust filter as discussed below.

In order to clean the interior you should perform the following steps:

- Shut down the system and unplug the power cord.
- Remove the main chassis cover and then access the inner chassis as discussed in Chapter 2.
- Using a commercially available compressed air PC cleaning product, blow the accumulated dust out of the unit. Pay special attention to air passages, grills, and heat sinks.
- Close up the system.

Maintaining (Cleaning) the Dust Filter

1) Observe the filter on top of the main chassis (Figure B-1). This filter is located over the air intake vents (any uncovered fans act as exhausts).

Figure B-1

Figure B-2

2) The filter is attached to the main chassis using four knurled knobs. Unscrew these knobs and gently pull the filter away from the system as illustrated in Figure B-2.

3) The filter should be cleaned as mandated by local conditions (a good rule of thumb is to clean the filter when it looks physically dirty).

4) Separate the filter element from its frame, and then place the filter element on a working surface that is protected by some form of absorbent, disposable material (Figure B-3).

Note: As illustrated in Figure B-3, the filter recharge kit (MaxVision Part Number 228-0002-0) comprises a pump spray cleaner and an aerosol spray containing replacement oil. MaxVision Part Number 228-0003-0 comprises a pump spray cleaner and a pump spray containing replacement oil. These kits can also be purchased at auto supply stores.

Figure B-3

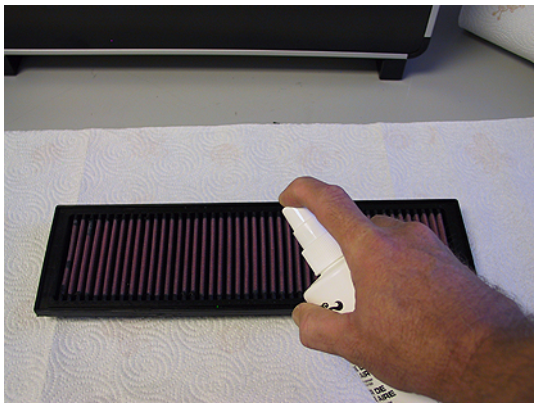

Figure B-4

5) It is recommended that you first tap the filter element on the work surface to dislodge any large embedded dirt particles, and then gently brush it with a soft bristle brush. Next, spray the cleaner onto both sides of the filter element (Figure B-4), leave for ten minutes, and then rinse the element using a low-pressure water source (tap water is OK).

Note: Always apply the water from the "clean" side of the filter element.

Note: The use of other cleaning materials (including high-pressure air) may damage and/or reduce the effectiveness of the filter element.

6) Shake off any excess water and then let the filter element dry naturally.

7) Spray replacement oil on the "dirty" side of the filter element (Figure B-5). Keep the nozzle about three inches from the filter. Note that the cotton in the filter element will absorb and distribute the oil into an even film; thus, it is important to use only a single pass for each area of the filter and to not over-spray the filter.

Note: The filter oil is a compound of mineral and animal oil blended with special polymers to form a very efficient barrier. Red dye is added to show just where you have applied the oil (this red color will eventually fade, but the oil will remain and filter the air).

8) Let the filter stand for 20 minutes and then touch-up any spots that do not visibly show the red dye contained in the oil.

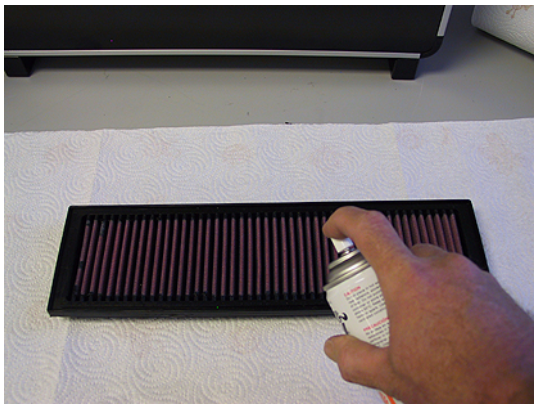

Figure B-5

9) Reattach the filter assembly to the top of the main chassis using the four knurled knobs.

Replacing the Lithium Battery

A Lithium Ion battery is included with the system motherboard. This battery is used for the Real Time Clock circuit. The expected lifetime of the battery is approximately 5 years.

There is a danger of explosion if this battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the motherboard manufacturer. Dispose of used batteries according to the manufacturer's instructions.

In order to replace the lithium battery you should perform the following steps:

1) Shut down the system and unplug the power cord.
2) Remove the main chassis cover and then access the inner chassis as discussed in Chapter 2.
3) Remove and replace the lithium battery according to the manufacturer's instructions.
4) Close up the system.

Appendix C: Screws and Required Tools

Screws

The various screws used in a MaxPac 8000 SL system are illustrated as shown in Figure C-1

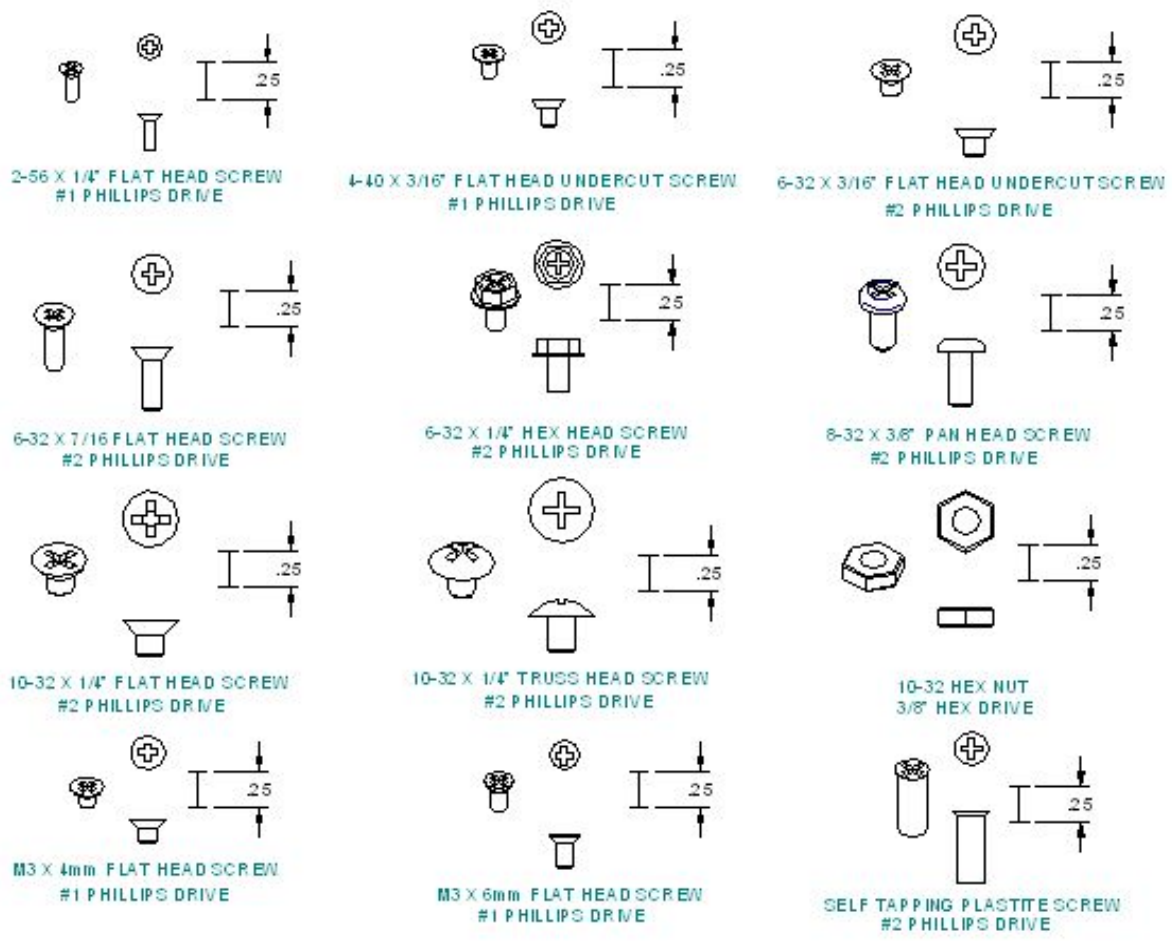
.25
2-56 X 1/4" FLAT HEAD SCREW
#1 PHILLIPS DRIVE
4-40 X 3/16" FLAT HEAD UNDERCUT SCREW
#1 PHILLIPS DRIVE
6-32 X 3/16" FLAT HEAD UNDERCUT SCREW
#2 PHILLIPS DRIVE
6-32 X 7/16 FLAT HEAD SCREW
#2 PHILLIPS DRIVE
6-32 X 1/4" HEX HEAD SCREW
#2 PHILLIPS DRIVE
8-32 X 3/8" PAN HEAD SCREW
#2 PHILLIPS DRIVE
10-32 X 1/4" FLAT HEAD SCREW
#2 PHILLIPS DRIVE
10-32 X 1/4" TRUSS HEAD SCREW
#2 PHILLIPS DRIVE
10-32 HEX NUT
3/8" HEX DRIVE
M3 X 4mm FLAT HEAD SCREW
#1 PHILLIPS DRIVE
M3 X 6mm FLAT HEAD SCREW
#1 PHILLIPS DRIVE
SELF TAPPING PLASTITE SCREW
#2 PHILLIPS DRIVE

Figure C-1. Screws used in MaxPac 8000 SL systems

Required Tools

Note: It is extremely important that you use only high-quality tools so as to avoid any slippage and stripping of screw heads and threads.

Note: It is highly recommended that you use magnetized screwdrivers so as to prevent screws from dropping inside the case and/or aiding in retrieving them if they do drop inside the case. (If your screwdriver isn't already magnetized, you can make it so by repeatedly "stroking" the blade with a permanent magnet. Using a high quality universal screwdriver with replaceable Phillips #1 and #2 bits is a good idea to ensure that your bits are always in excellent condition.

Most of the module replacement and upgrade procedures discussed in this chapter can be performed using only a pair of #1 (small tip) and #2 (regular tip) Phillips screwdrivers.

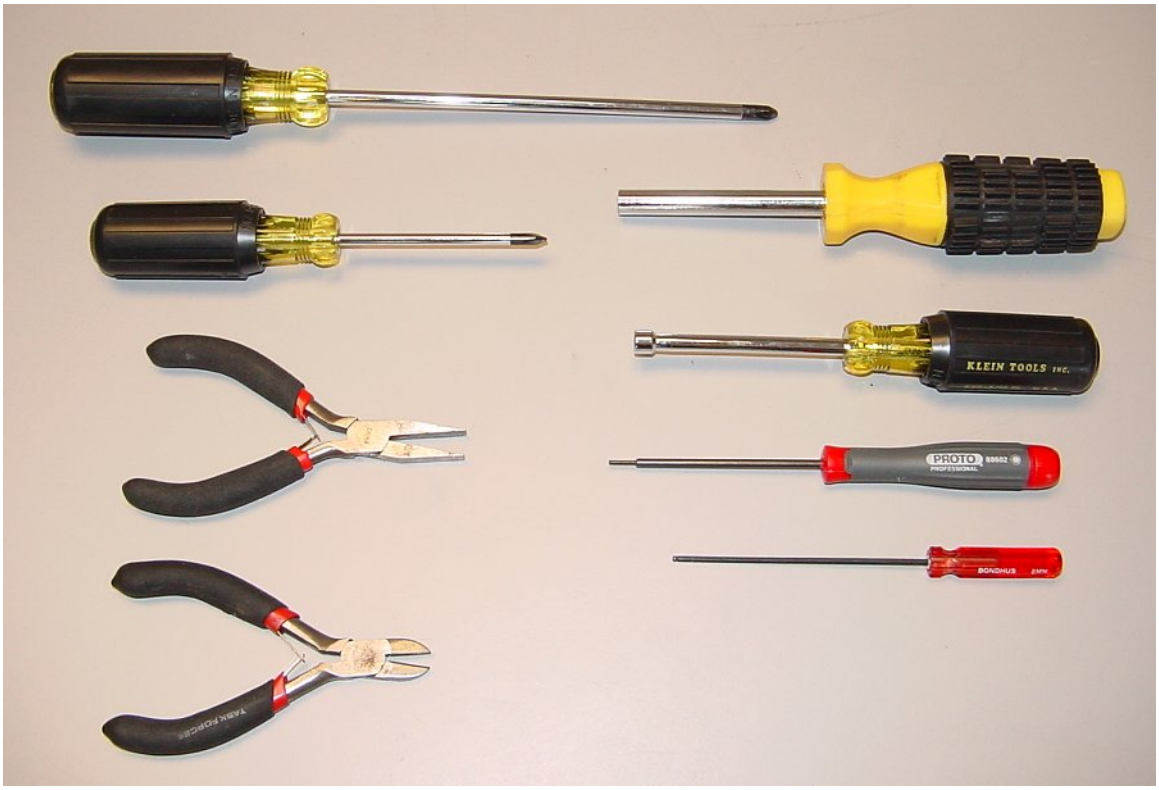

For some procedures, however, needle-nose pliers will be of use, and you may have to cut cable ties on occasion.

Appendix D: Contacting MaxVision Support (RMA and Serial Numbers)

Repairing/Replacing Products/Accessories

MaxVision will repair or replace products/accessories due to defects in material or workmanship, or any failure of the hardware system to conform to written specifications. Warranty repairs will be performed at MaxVision's service center. Any replacement parts/products shall be new or refurbished. Any repaired or replaced product will not extend the original warranty term of the product. Additionally, this warranty period will not be extended as a result of the purchase of any additional parts/products from MaxVision Corporation.

Contacting Technical Support and RMA Numbers

During the warranty period, MaxVision will provide technical support for hardware diagnosis via email (maxvision.support@maxvision.com or support@maxvision.com) or the technical support and customer service hotline (800-533-5805). If MaxVision's technical support determines that the product is defective, MaxVision will issue a *Return Material Authorization (RMA)* number to the customer. The customer is required to ship the product referencing the RMA number on the outside of the original (or equivalent) packaging with a copy of MaxVision's RMA form if provided. The return shipment must be sent insured and prepaid to:

MaxVision, Rugged Portable Computers LLC
495 Production Avenue
Madison, AL 35758
USA

Attn: Support

MaxVision will ship the repaired or replaced product to the customer with freight prepaid if the customer's address is within United Stated of America (excluding Alaska, Hawaii, Puerto Rico and U.S. possessions). Shipments to other locations will be shipped at the customers expense. MaxVision must receive notice of all events before the warranty period expires. NOTE: MaxVision will not be responsible for data on the hard-disk drive. Before you ship the product(s) to MaxVision, please back up your data from the hard-disk drive(s)or any other storage device(s) in the product(s).